

Instruction manual

Ranos dB 1 / Ranos dB 2




For firmware version 3.2.0 or higher

To all residents of the European Union Important environmental information about this product

This symbol on the device or the package indicates that disposal of the device after its lifecycle could harm the environment. Do not dispose of the unit (or batteries) as

unsorted municipal waste; it should be taken to a specialized company for recycling. This device should be returned to your distributor or to a local recycling service. Respect the local environmental rules.

If in doubt, contact your local waste disposal authorities.

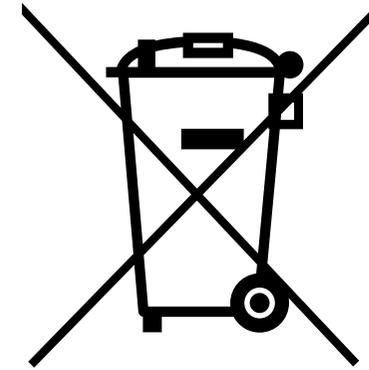

Thank you for choosing Dutch Sensor Systems. Please read the manual thoroughly before bringing this device into service. If the device was damaged in transit, do not install or use it and contact your dealer.




Table of contents

4	Safety Instructions
5	General Guidelines
6	Precautions
7	About this manual
8	Marking
10	Specifications
18	General description
21	Parts and functions
22	Description of measurement quantities
23	Power
28	Parts and accessories
30	Optional parts and accessories
34	Mounting options and measurement accuracy
35	Acoustic calibration using sound calibrator
37	Connect App: software installation and connection via USB
39	Connect App: working principles
41	Connect App: "Ranos settings" page
47	Connect App: "Ranos live" page
53	Connect App: "Ranos info" page
54	Connect App: "Ranos calibration" page
55	Dimensions in mm

Safety Instructions



This device is not suited for children under the age of 16, and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning the use of the device in a safe way and understand the hazards involved. Children shall not play with the device. Cleaning and user maintenance shall not be made by children without supervision.

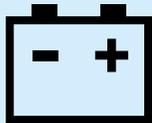

Batteries are electrochemically live at all times. Do not short circuit the battery terminals. Inspect the battery consignment for signs of transport damage. Ensure the consignment has all items listed on the delivery note or invoice, i.e. batteries, cables, shrouds etc. While unpacking each battery, take care not to drop anything on the terminals. Inspect each battery for physical damage such as cracks or distortion of the case and terminals.

General Guidelines

- Familiarise yourself with the functions of the device before actually using it.
- All modifications of the device are forbidden for safety reasons. Damage caused by user modifications to the device is not covered by the warranty.
- Only use the device for its intended purpose. Using the device in an unauthorised way will void the warranty.
- Damage caused by disregard of certain guidelines in this manual is not covered by the warranty and the dealer will not accept responsibility for any ensuing defects or problems.
- Neither Dutch Sensor Systems B.V. nor its dealers can be held responsible for any damage (extraordinary, incidental or indirect) – of any nature (financial, physical...) arising from the possession, use or failure of this product.
- Due to constant product improvements, the actual product appearance might differ from the shown images.
- Product images are for illustrative purposes only.
- Keep this manual for future reference.

Precautions

- Do not use screws of any other type or length from what is supplied.
- Install all rubber caps or connectors during outdoor use. All parts are rated IP67 or better, but only when mated to a connector or cap.
- Turn off the Ranos dB before storage.
- When storing the Ranos dB for a longer period of time, make sure the battery is fully charged and check the battery charge once every month.
- When disconnecting cables, always grasp the plug and do not pull the cable.
- When transporting the Ranos dB, especially with the battery installed, use an appropriate case or packaging.
- Do not clean the Ranos dB using solvents or chemicals.
- Take care that no electrically conductive objects are left inside of the Ranos dB.
- Dispose of the unit and of batteries only according to national and local regulations at the place of use.


About this manual

- The instructions in this manual apply to the Dutch Sensor Systems Ranos dB 1 and Ranos dB sound level meters with firmware 3.2.0 or higher.
- The user manual, calibration manuals and additional information can be downloaded from the support section at: iotsoundsensor.com


Marking

Examples of CE Marking - Ranos dB


Model	Ranos dB 1 - V3.0.3
Serial no	123456
Applicable standard	Accuracy according to IEC 61672-1:2014 en, performance class 1
Power rating	5VDC, 60mA max.
IP rating	IP67
Frequency range	LoRa 863-870MHz GNSS 1571-1606MHz
Manufacturer	Dutch Sensor Systems B.V. - Antennestraat 66, Almere, NL

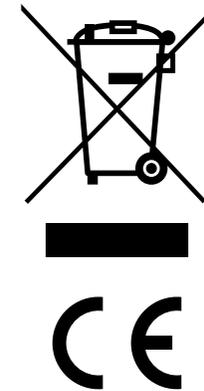


Model	Ranos dB - V3.0.3
Serial no	123456
Applicable standard	Accuracy according to IEC 61672-1:2014 en, performance class 2
Power rating	5VDC, 60mA max.
IP rating	IP67
Frequency range	LoRa 863-870MHz GNSS 1571-1606MHz
Manufacturer	Dutch Sensor Systems B.V. - Antennestraat 66, Almere, NL

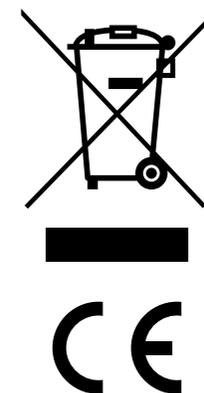

Model Ranos dB 1 - V3.0.3
Serial no 123456
Applicable standard Accuracy according to IEC 61672-1:2014 en, performance class 1
Power rating 5VDC, 60mA max.
IP rating IP67
Frequency range LoRa 902-928MHz GNSS 1571-1606MHz
Manufacturer Dutch Sensor Systems B.V. - Antennestraat 66, Almere, NL

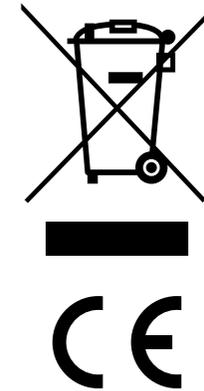

Model Ranos dB - V3.0.3
Serial no 123456
Applicable standard Accuracy according to IEC 61672-1:2014 en, performance class 2
Power rating 5VDC, 60mA max.
IP rating IP67
Frequency range LoRa 902-928MHz GNSS 1571-1606MHz
Manufacturer Dutch Sensor Systems B.V. - Antennestraat 66, Almere, NL

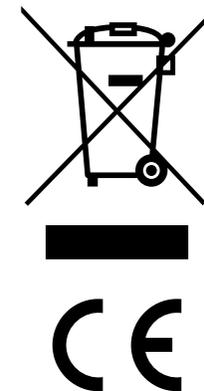

General description

Discover the Ranos dB

The highlights of the Ranos dB

- Two models are available, the Ranos dB 1 and the Ranos dB 2. The Ranos dB 1 meets IEC 61672-1:2014 Class 1 specifications and the Ranos dB 2 meets IEC 61672-1:2014 Class 2 specifications.
- Equipped with a solar panel, has LoRa connectivity and works 100% autonomously.
- Lightweight housing waterproof.
- GPS on board.
- Easy to operate from any cloud platform.
- Data visualization via DSS Dashboard+ that seamlessly integrates with the Ranos dB.
- Dynamic range of 40 - 120 dB(A) and a DSP sample rate of 48 kHz.
- Detachable microphone that can be mounted at any desired location.
- LoRa network settings by the DSS Connect App (Android).



Audio performance

The Ranos dB's accuracy and performance is high, as is necessary to meet IEC 61672-1:2104 Class 1 and 2 specifications. The Ranos dB has a dynamic range of 40 - 120 dB(A) and a usable frequency range of past the human hearing limits of 20Hz to 20kHz. Available frequency and time weightings are A, C, Fast, Slow and Leq. The calculations run at the audio sample rate of 48 kHz.

Electret condenser microphone

The microphone is of an electret condenser microphone type. Its key features are the performance to cost ratio, its IP67 rating and its omnidirectional free-field sound field characteristics. Optionally the microphone can be detached from the housing to be mounted at any desired location. Additionally, a 1.5 meter, 3.0 meter and 5.0 meter microphone extension cable is available.

IEC 61672-1:2014 standard

The Ranos dB 1 and Ranos dB meet the class 1 and class 2 performance specifications of the IEC 61672-1:2014 standard.

Sustainable housing

Highly rigid and using plastic HIPS, the housing is lightweight and quite suitable for years of intensive use. HIPS (High Impact PolyStyrene) has a fire retardant effect. This is an absolute requirement because a lead acid battery is used as a backup.

Waterproof

All parts are rated IP67 or better. This makes the Ranos dB immersion-proof. The interior is vented through special membranes which only lets through gasses.

Solar powered

The Ranos dB is highly energy efficient. The power consumption is low and every bit of available solar energy is harvested and stored in a battery by making use of an efficient

MPPT (Maximum Power Point Tracking) algorithm. For applications where solar irradiation is low, power consumption can be further reduced by optimizing the settings. The LoRa transmission interval can be increased and the GPS can be turned off.

Sealed Lead Acid (SLA) battery

Whenever no solar power is available, the Ranos dB runs off of a SLA battery. An SLA type battery is used for its wide temperature range, cost efficiency and it is available across the whole world.

LoRa network

The Ranos dB communicates via LoRa. We can deliver to all LoRa (frequency) regions in the world. The device is suitable for LoRaWAN Class C networks, allowing the cloud server to send direct messages to the Ranos dB. This enables continuous adjustability of measurement settings, characteristics and network configurations.

Uplink and Downlink

As the Ranos dB can send uplinks as well as receive downlinks, it is quite easy to operate from any cloud platform. Do you wish to set how often you receive certain measurements? No problem!

DSS Connect App

The Connect App is used to intuitively link a Ranos dB to an account. After linking the app can be used for configuration and testing. The app is available for devices that use Google Android OS and via the web using a Google Chrome browser (Windows only). The connection between the Ranos dB and the app is made via USB.

Payload description

We deliver a complete package including all information on integrating the Ranos dB with your dashboard environment. The package consists of a parser for code testing and a sample code in Javascript.

Data visualization

DSS has its own data platform that integrates seamlessly with the Ranos dB. This is available for three months starting from the date of purchase. In addition, we offer an integration with Datacake and we can assist you in displaying the data in any desired IoT platform.

Support

We are here to help you! The quickest way to get you up and running again is contacting us online or checking the Support page on the website. The device's modular structure allows for easy replacement, which is part of the service we provide.

Description of measurement quantities

Measurement quantity notations are composed of the following abbreviations:

L	Sound pressure level, F (fast) or S (slow) time weighting	A	A frequency weighted sound (pressure) level
L*eq	Equivalent continuous sound level	C	C frequency weighted sound (pressure) level
L**min	Minimum sound level	Z	Z frequency weighted sound (pressure) level
L**max	Maximum sound level	F	Fast time weighting
L*peak	Peak sound level	S	Slow time weighting

The * is replaced by a frequency and/or time weighting

Power

Power source

The Ranos dB 1 and Ranos dB are powered from a 6VDC rechargeable sealed lead acid battery. At reference environmental conditions (most importantly around 20 degrees Celsius), the battery capacity is sufficient for two weeks of continuous operation from a fully charged state, without any additional solar charging. This is to be able to bridge multiple subsequent days of bad weather.

Power on/off

When the switch inside of the recess on the side of the Ranos dB is pressed in, the Ranos dB is powered on. Within a few seconds after pressing in the switch, the LED ring around the switch will turn on continuously once for a few seconds to indicate it has been powered on.

Charging

The battery is automatically charged when the solar panel of the Ranos dB is exposed to sunlight. The Ranos dB continues charging from solar energy while it is not powered on, it is protected from overcharging and short circuit.

Checking power status

When powered on and when no LoRa keys have been set, the LED ring around the power switch will blink on and off continuously with a rate of roughly 2 blinks per second. If a LoRa key has been set, the LED ring around the power switch will blink once at every LoRa up and down-link, when there are errors there will be a pattern of blinks depending on the type of error.

In a situation where a LoRa key has been set, where no errors are present, and where a long LoRa transmission interval has been set, the Ranos dB might not show any indications of power status in or around the Ranos dB for a long period of time. In this case it is advised to press out and in the power switch to confirm power status from the initial power on LED indication. Alternatively, when the measurement routine cannot be interrupted, the power status and battery voltage can be checked via USB using the DSS Connect App, refer to the Connect App section for checking power status using this method.

Installing or replacing the battery

A Yuasa NP12-6 sealed lead acid battery, or one of a different make and model, but with the same specifications is recommended:

- SLA type (sealed lead acid)
- 6VDC nominal voltage, 6,825VDC float charge voltage
- 12Ah nominal capacity or larger
- 6,35x 0,8 mm male quick disconnect tabs
- At least -10 to + 50 degrees Celsius operating temperature (charge and discharge).
- Battery size of 151 x 50 x 94 mm (quick disconnect tab height excluded), male quick disconnect tabs positioned on top of the battery along one of the long sides.

An empty, flat and horizontal working area of at least 50x50cm is advised for performing the following steps.

Lid and battery removal:

(in case of replacing the battery):

1. Remove the housing lid by removing the six screws on the side of the housing using a Philips 2 screwdriver.
2. Pull the battery out of the housing, make sure the battery wires are not caught on anything or pinched while doing so. Set the battery down right next to the Ranos dB once it is completely out of its compartment to prevent pulling force from being exerted on the battery wire harness.
3. Carefully slide the Faston connector off of the battery terminals by pulling and wiggling on the red insulation part of the connectors. Long nose pliers can be used if more gripping force is needed. Never pull on the wires, use careful control of force while pulling on the connector to prevent yourself from pulling on the wires when the connector comes off.

Battery and lid installation:

4. For use cases where the Ranos dB will be moved or transported with the battery installed, it is advised to fill the play between the battery and battery compartment walls. Stick the supplied foam pieces to the battery:
 - Bottom: 45x140x2mm.
 - Long side: 70x140x2mm.
 - Short side: 45x80x12mm.
5. Set the new battery down next to the Ranos dB, aligned with the battery compartment. When looking into the opening of the housing, the battery faston flat tabs should be to the left in order for them to clear the internal reinforcement bulkheads when sliding in the battery.
6. Inside of the Ranos dB there is one unconnected cable harness with female Faston connectors. Slide the Faston connector of the black wire onto the black or - terminal

of the battery, and slide the Faston terminal of the red wire onto the red or + terminal of the battery.

7. Slide the battery into the battery compartment, ensure the wires do not get caught on anything, pinched between anything and make sure no pulling force is exerted.
8. Position the cover over the opening in such a way that the screw holes are lined up, and make sure the cover closes all the way along

the edges without gaps. The housing edge along the opening should fall into the grooves machined into the inside of the cover. It might be necessary to put some pressure on the lid before it snaps into place. Lay the sensor on its side before doing so.

9. Mount the lid with the six supplied M4x12 screws. The screws must be tightened with a force of 1Nm. Do not overtighten or use screws longer than 12mm to prevent damage to the housing.



Battery replacement interval

In critical applications it is recommended to preventively replace the battery once a year. This is due to the difficult to predict combination of environmental effects and a varying average solar irradiance per region and month. In less critical applications once every 2 years is sufficient. In an ideal situation, where it is constantly around 20 degrees Celsius and where the battery is always at 95% charge, the battery would be able to last 3 to 5 years.

When the battery charge had been drained too far, the Ranos dB will automatically shut down when the battery voltage is too low, and once the battery has charged up enough it will also automatically start up again.

Battery health

To keep the battery health optimal, the following is advised:

- The Ranos dB should not be stored with a discharged battery, charge to at least 6,2VDC before putting the Ranos in storage.
- Check the battery voltage every month when storing for a longer period of time.
- In normal operation, make sure the battery is as full as possible, as much of the time as possible by optimizing placement.

Estimating if solar irradiation is sufficient

We advise to check the energy production for your region using an online tool and our energy specifications.

- Visit the following link:
https://re.jrc.ec.europa.eu/pvg_tools/en/tools.html
- Select the "OFF-GRID" tab.
- Select your location on the map.
- Fill in the following specifications:
Solar radiation database:
PVGIS-CMSAF
- Installed peak PV power [Wp]: 9,2
- Battery capacity [Wh]: 72
- Discharge cutoff limit [%]: 40%
- Consumption per day [Wh]: 4,08
- Slope [°]: 35
- Azimuth [°]: 0

- Click visualizer results and view the results.
- The solar panel should be pointed to the south, the effect of an offset angle relative to the south can be viewed by varying azimuth.
- The solar panel is mounted to the Ranos dB housing at an angle of 35 degrees.
- The light blue bars in the "PV output" graph show the average of the energy not captured because the battery became full.
- Under Simulation outputs "Percentage days with full battery [%]:" indicates how much of the time the battery was 100% full. The higher this percentage, the longer the battery will last.

Parts and accessories

Microphone

Two microphone models are available, the MMDB1 and MMDB2. The two models are exactly the same and both are selected for a free-field frequency response as close as possible to flat. The difference is in that the MMDB1 comes with a pre-configured frequency response correction for a frequency response within class 1 tolerance. The MMDB2 is within class 2 frequency response tolerance.

Installing the microphone

- Mount the microphone to the back of the Ranos dB using the two supplied clamp parts and four M4x16 screws. Before completely tightening the screws, slide up the microphone until the microphone cable gland meets the bottom side of the bottom microphone clamp. For effective clamping, the clamping parts should be roughly perpendicular to each other.

The screws must be tightened with a force of 1Nm. Do not overtighten or use screws longer than 16mm to prevent damage to the housing.

- Connect the microphone cable to the microphone connector located below the microphone mount. Line up the white arrows and press until a click is heard. To disconnect the microphone, pull back on the microphone connector sleeve.

Windscreen

When making measurements in windy environments, wind noise will cause measurement errors. Such effects can be reduced by using the windscreen, WS1. WS1 is suitable for long term outdoor use. The effect of the windscreen on the microphone frequency response is negligible. The windscreen is simply slid over the microphone.

Dummy microphone

Dummy microphone DM1 can be connected in place of the microphone to enable injection of electrical signals for testing. Signal can be input to the dummy microphone via standard BNC. The input is AC coupled and the output of the dummy microphone loads the input of the Ranos dB with a 2k Ohm resistance. There is no load inductance or capacitance. The microphone is internally buffered, the buffer parasitic capacitance and inductance is smaller than that of the connection cables. No additional termination is needed. The dummy microphone effect on the frequency response of the microphone input is negligible.

Switch recess cover

A cover for the connector/switch recess is supplied as extra protection and for visual reasons. The cover can simply be pressed into the recess. Make sure to press the rubber cap of the USB connector into the connector before pressing the recess cover in.

Rubber feet

To prevent damage to the bottom of the sensor when standing on top of a surface, stick on rubber feet are supplied. Stick the rubber feet to the 4 bottom corners of the sensor.

Pole mount

The Ranos dB can be mounted to a pole with a diameter of 40 to 120mm.

Installing the pole mount

1. Mount the two brackets to the back of the Ranos dB using the supplied M8x16 screws and the M8 rings. A Philips 3 screwdriver is needed. The screws must be tightened with a force of 3Nm. Do not overtighten or use screws longer than 16mm to prevent damage to the housing.
2. Loosen the pole clamps until they open up and insert them through the brackets.
3. Wrap the clamps around the around the pole and back into the other ends of the pole clamps.
4. Tighten the pole clamps until the clamps stop sliding when lightly pushing/pulling the sensor housing sideways/up and down. The clamps can damage the paint of a pole when mounted directly to it. To prevent damage use a tough plastic or rubber mat between the pole and clamps.




Optional parts and accessories

Microphone extension mount (optional)

The microphone extension mount (MEM1 and MEM2) allows the MMDB1 and MMDB2 microphones to be mounted extended from a pole. This can be done to reduce the effects of reflections and diffraction from the housing and/or a pole. A microphone extension cable is needed when using a microphone extension mount.


Two lengths of extension mounts are available:

- Microphone extension mount 0,6m (MEM1)
- Microphone extension mount 1m (MEM2)

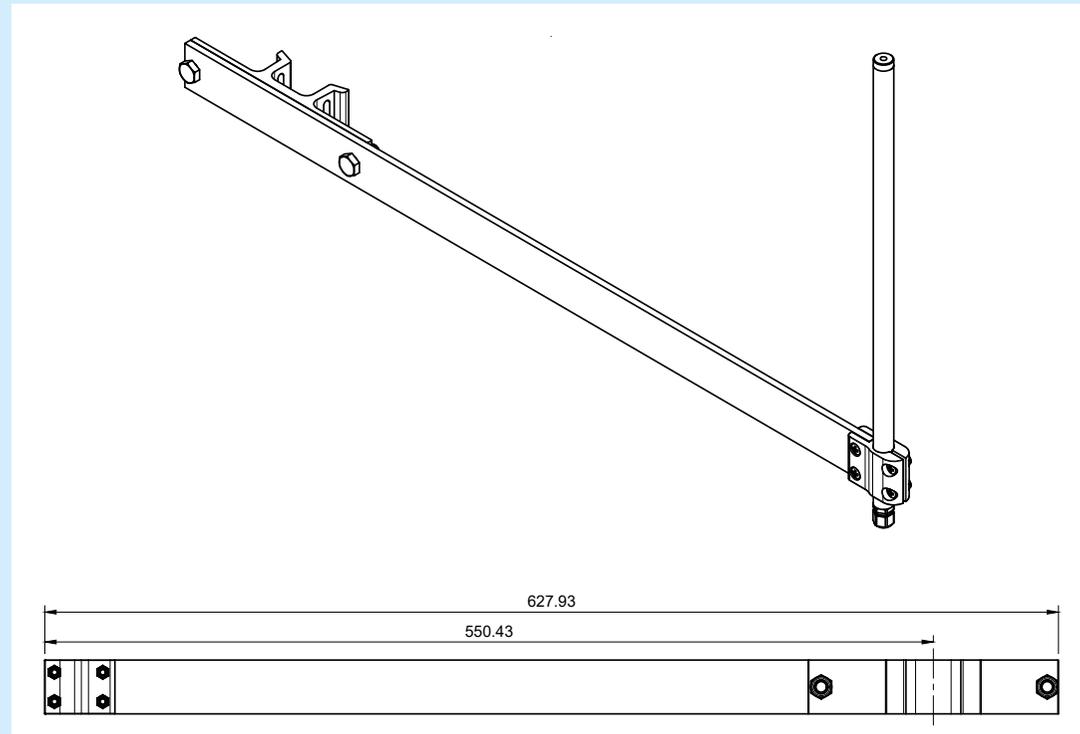

Microphone extension mount installation:

1. Install the pole mounting bracket to the extension arm using the two supplied M8x20 screws, rings and nuts. Orientation does not matter, as the mount is symmetrical.
2. Install the microphone clamp to the extension arm using the two of the four M4x12 screws and nuts and a Philips 2 screwdriver.
3. Insert the screw and nut for the microphone clamping part and turn the screw a few times just to keep them in place.
4. Insert the microphone diaphragm side first through the bottom of the microphone clamp, in such a way that the microphone will point up. Slide the microphone trough until it stops against the cable gland of the microphone.
5. Tighten the microphone clamp screws until the microphone is secured firmly.
6. Loosen the pole clamp until it opens and insert it through the pole mount bracket.
7. Wrap the clamp around the around the pole and back into the other end of the pole clamp.

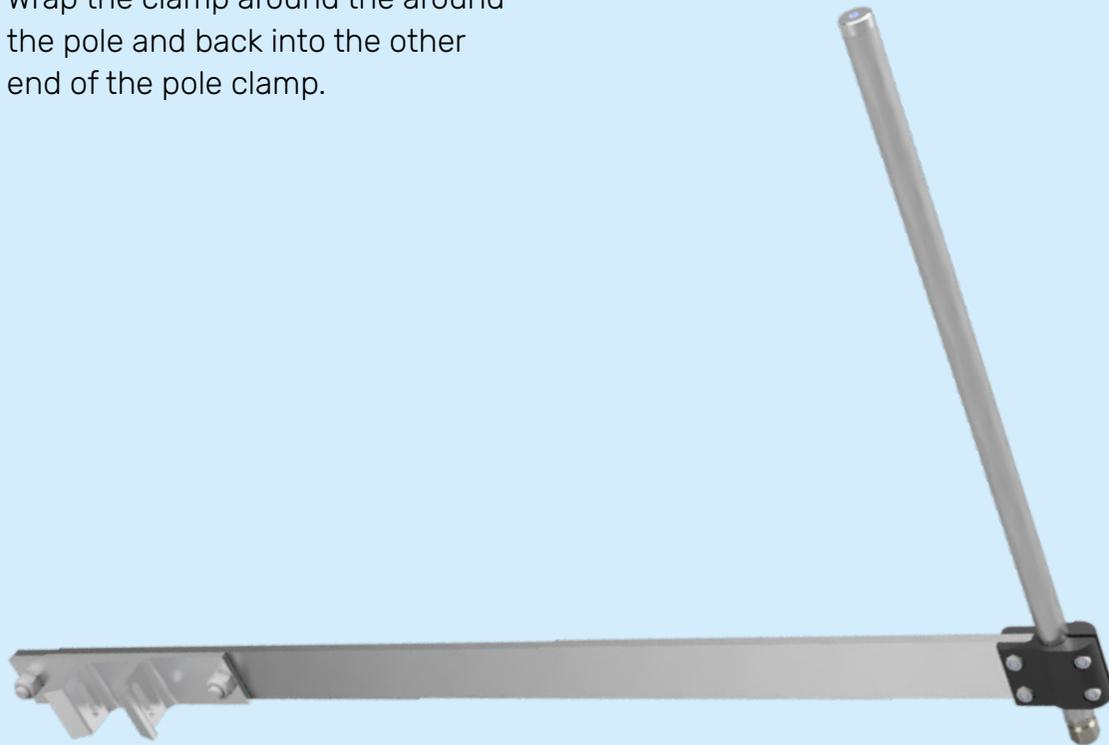

Microphone extension cables (optional)

A microphone extension cable can be used for specific use cases or for testing and calibration. The extension cable can be connected between the microphone output connector and the Ranos dB microphone input connector on the housing. The microphone extension cables can be used with the microphone extension mount.

The Ranos dB does not have to be powered down while installing the extension cable. However, high minimum and maximum values will be displayed at the moment of (dis) connection. An overload and/or under range flag might appear too.

Three lengths of extension cables are available:

- Microphone extension cable 1,5m (MEC015)
- Microphone extension cable 3m (MEC030)
- Microphone extension cable 5m (MEC050)

Wallmount (optional)


The wallmount (WM1) can be used to mount the Ranos dB to a wall. When using the wall mount, it is advised to mount the microphone separately, as described in the section "Mounting options and measurement accuracy". If the Ranos dB is mounted to a wall with the microphone in standard configuration, mounted to the back of the Ranos dB, the overall measured SPL will increase and so called "comb filtering" effects will appear.

The wall mount consist of a part that is mounted to a wall, and another part that is mounted to the Ranos dB. The Ranos dB can be hung into the wall part and the two are locked together using a single M4 screw.



Installing the wall mount:

1. Mount the wall mount part (with 4 mounting holes) to the rear of the Ranos dB using the M8x16 screws and M8 rings that were supplied with the pole mounting kit, using a Philips 3 screwdriver. The bracket should be oriented in such a way that the tapped M4 screw hole is at the bottom.
2. Mount the other half of the wall mount to the wall or a surface using the screws from the screw kit, or supply your own.
3. Hang the Ranos dB into the wall mount such that the vertical parts hook into each other.
4. Align the through hole and tapped holes at the bottom of the wall mounting brackets.
5. Insert the M4x12 screw from the bottom through the wall side mounting bracket, into the tapped M4 thread of the Ranos dB side mounting bracket and tighten hand tight.

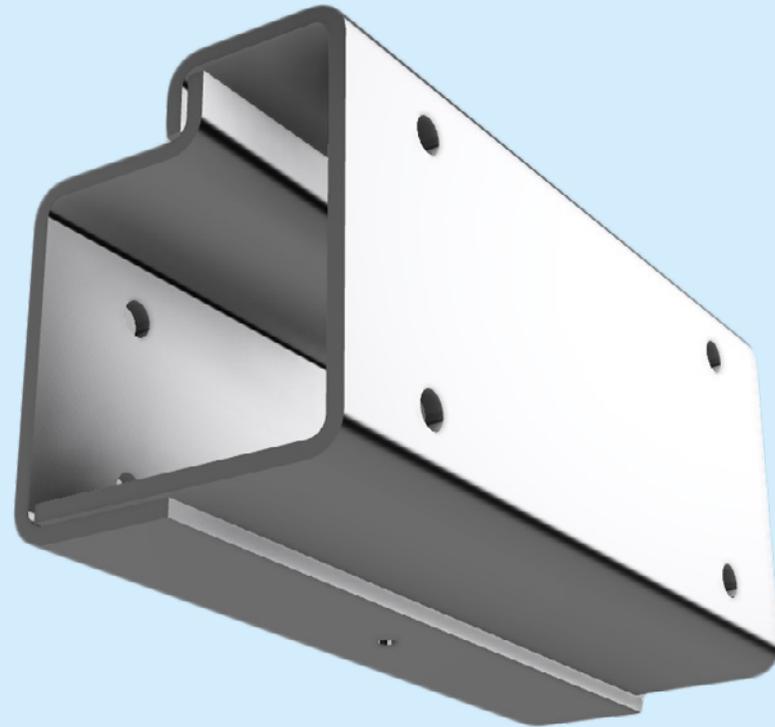

Mounting options and measurement accuracy

Three mounting options for the Ranos dB are available: pole mount, tabletop and wall mount. The pole mount and tabletop accessories are shipped with the Ranos dB as standard, the wall mount is optional. For performing measurements conforming to the specifications, care needs to be taken in the used mounting method and placement of the Ranos dB.

It would be most optimal if it was possible to have the microphone float on its own in free air. This is obviously practically impossible. To minimize the effect of reflections and diffraction of nearby surfaces, the nearby surfaces should be as small as possible and should preferably be round(ed). The amplitude of the reflected or diffracted sound wave will also be decreased by mounting the microphone as far away from the nearby surfaces as possible.

Mounting the Ranos dB to a pole with a diameter of 80mm or less, and at a height of at least 3m is advised. It is even better if the microphone is mounted to the same pole, but separately from the Ranos dB and extended from the pole using the microphone extension mount and microphone extension cables. The object the microphone is mounted to should be free from mechanical vibrations, as mechanical vibrations might show in measurements at lower levels.

In general, the following rules of thumb should be used:

1. Mount the Ranos dB at least 2m away from large flat reflective surfaces, preferably more than 3 m. The more distance, the better.

2. In case of tabletop or wall mount use, the microphone will have to be mounted separately at a distance from objects and surfaces using the microphone extension mount and cables.

Example good mounting options:

- Ranos dB mounted to a free standing pole with a diameter of less than 80 mm, at a height of at least 2m from the ground. Microphone mounted in standard configuration, to the rear of the Ranos dB.
- Ranos dB mounted to a wall or standing on a surface. Microphone mounted separately to a nearby free standing pole with a diameter of less than 80 mm, at a distance of at least 2 m from the ground and walls, using a microphone extension mount and microphone extension cable.

Acoustic calibration using sound calibrator

A sound calibrator for ½" microphones that complies with IEC 60942 and the applicable performance class must be chosen. The reference sound pressure level is 94dB and the sound level calibration check frequency is 1kHz.

Examples of suitable calibrators:

- Cirrus Research CR:514
- Cirrus Research CR:515

- Power on the Ranos dB and connect it to your Android device using the DSS Connect App from the Google Play store, or to your Windows OS PC (via Google Chrome browser: app.dutchsensortems.com). Use the supplied USB cables and adapters to make the connection.
- If the Ranos dB has already been registered to an account, use the corresponding credentials to log in. If the Ranos dB has not been registered to an account yet, register or log in and register the Ranos dB to your account.
- If the Ranos dB has been registered to an account for one time calibration only, it can be unregistered from the account using the Connect Dashboard dashboard.dutchsensortems.com Log in using the credentials of the account the Ranos dB is registered to. Navigate to "Devices" and click the trash can icon to the right of the Ranos dB you would like to unlink.

- Navigate to the second “ranos live” tab.
- Install a ½ inch adapter in/onto your sound calibrator if applicable.
- Slowly insert the microphone all the way into the coupler.
- Turn on the sound calibrator, set the frequency to 1kHz and the sound level to 94 dB. When the sound calibrator signal frequency is valid, the microphone is within specification, and when the signal has stabilized, the Ranos dB will detect the sound calibrator signal.
- Once the sound calibrator signal has been detected, a “Calibrator detected” popup will show up.

Click “Start automatic calibration”. Do not move the microphone or calibrator while the calibration is running, the calibration will be aborted when a signal fluctuation has been detected. The automatic calibration will determine the necessary adjustment so that the reading of the Ranos is equal to the sound pressure level inside of the coupler. At the end of the routine, the adjustment value will automatically be set and stored in the “Correction” field in the first settings tab of the Connect App.

- Turn off and carefully remove the sound calibrator.

Connect App: software installation and connection via USB

The Ranos dB is connected to the Dutch Sensor Systems Connect App via a wired USB connection. The Connect App is used to register, configure, test and calibrate the Ranos dB. While the Ranos dB is meant to be used remotely, the Connect App also enables a real time measurement display with extensive measurement options. A logging feature is included in case remote support from Dutch Sensor Systems is required.

After registering and configuring your device, it will become available in the Connect Dashboard for further assignment to projects, remote data collection and more.

Preparing your device for use

Smartphone with Google Android operating System:

1. Open the Google Play Store, search for "DSS Connect App" and install the application.
2. For some smartphones it might be necessary to enable the OTG function manually. To do so, go to settings > System and enable OTG.
3. Click "Register" to create an account and login, or click "Login" if you already have an account.
4. The USB connection screen will appear.

Personal computer with Microsoft Windows operating system:

- Download and install the Google Chrome web browser: www.google.com/chrome
- Using the Google Chrome web browser, navigate to app.dutchsensormsystems.com
- Click "Register" to create an account and login, or click "Login" if you already have an account.
- The USB connection screen will appear.

Connecting your device to the Ranos dB via USB

- Power on the Ranos dB.
- Connect the Ranos dB to your device using the supplied cable, and if applicable one of the supplied OTG adapters.
- For a smartphone with Google Android operating System, accept the connection.
- For a personal computer with Microsoft Windows operating system click "Connect and select the Ranos dB in a popup that will appear.
- The Ranos dB is now connected.
- Do not forget to press the rubber cap back into the USB connector after configuration to prevent moisture ingress in outdoor use.

Note: for some Personal computers with Microsoft Windows operating system it might be necessary to install FTDI drivers before the Ranos dB will be recognized in the the USB connection screen. This usually won't be necessary. FTDI driver download web page: **Drivers - FTDI (ftdichip.com)**

Connect App: working principles

Connection and network

A smartphone or PC is connected to the Ranos dB using the Connect App and a USB connection. The network connection of the smartphone or PC is used to register the Ranos dB to an account, check for available settings and firmware updates.

Without a network connection the Connect App will not work.

Connect App and Connect Dashboard

Either the Connect App or the Connect Dashboard can be used to create an account, the credentials can be used for both. The app or webpage will guide the user through the registration process.

Smartphone with Google Android OS:
Google Play Store: "DSS Connect App"
PC with Microsoft Windows OS:
app.dutchsensorysystems.com

Registering a Ranos dB to an account

The first step is to log into an account or to register an account. The account that is logged in will be the account the Ranos dB is linked to. When a new or unregistered Ranos dB is connected to the Connect App, the app will ask to give it a name. Completing this step will link the Ranos dB to the logged in account. After registering the Ranos dB it becomes available in the Connect Dashboard under "Devices", with the name that was given in the Connect App. The Ranos dB can be unregistered from the "Devices" page in the Connect Dashboard.

When trying to connect to a Ranos dB that has been registered to a different account from the account currently logged in, an "Unauthorized" message will be displayed. You will not be able to continue any further.

Ranos settings

Settings are stored locally, but are also synchronized with a database. This is done in order to ensure the settings are safe, even if a firmware update fails. When a Ranos dB has been unregistered from an account, the default settings will be synchronized from the database at the first following time the Connect App checks for settings.

One part of the settings that runs in the background is the FIR (Finite Impulse Response) microphone correction filtering. A FIR microphone correction filter can be uploaded by Dutch Sensor Systems. This filter is used to linearize the frequency response of a microphone. The Ranos dB 1 makes use of this filter, the dB 2 does not.

Firmware update

After connecting the Connect App to the Ranos dB, the Connect App will first check if there are any firmware updates available. If a firmware update is available and critical, a popup will show up. You cannot continue further any in the app before installing the firmware update. If an update is not critical it will become available for installation from the "ranos info" page. After a firmware update has finished, the latest stored settings will be restored.

Connect App: “Ranos settings” page

After connecting the Connect App to the Ranos dB, this is the first page to show up by default. The settings page is the most important page, as this is where you will configure the LoRa wireless communication settings and which measurement quantities will be sent.

After changing the settings the save button must be clicked in order for the new settings to become active and stored.

Connection type

Set the network connection method to ABP (Activation By Personalization) or OTAA (Over-The-Air Activation).

Settings for OTAA

Device EUI:

End-device identifier

Join EUI:

Application identifier

App key:


Application key

ADR:

Adaptive data rate on or off. ADR will optimize power consumption by finding the lowest power transmission settings while ensuring that messages are still received at gateways. ADR off is advised for applications where the device is continuously moving.

Spreading factor:

LoRa is based on CSS (Chirp Spread Spectrum) technology. The spreading factor controls the chirp rate. A lower spreading factor will result in faster chirps, a higher transmission rate and a reduction of range. A higher spreading factor will result in a longer time-on-air and more power consumption.

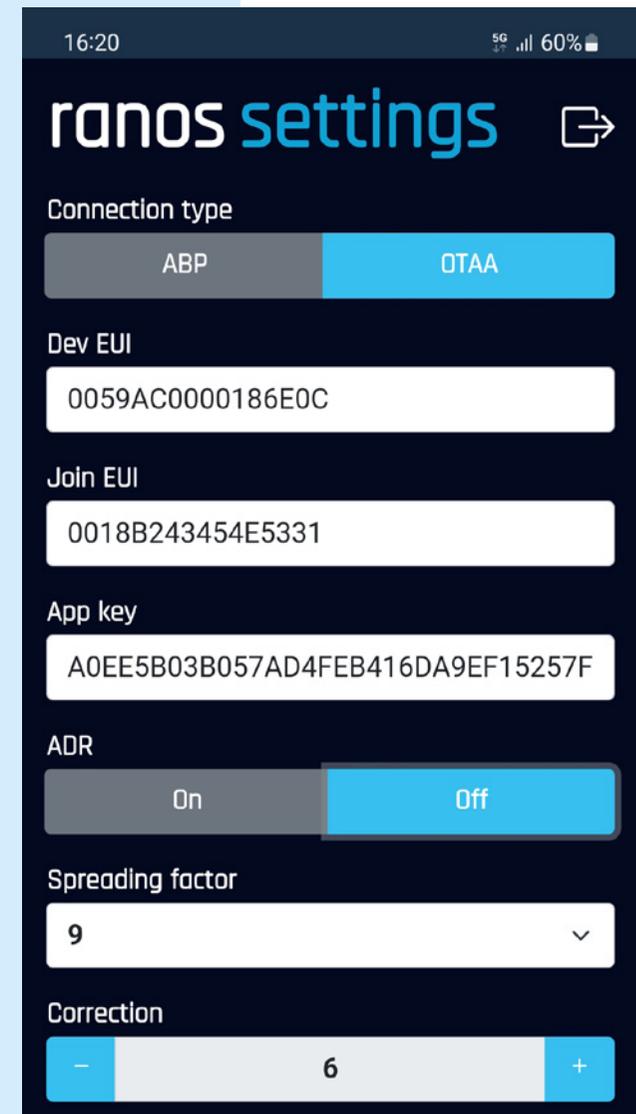

Settings for ABP

Device address:

Device address

App session key:

Application session key, used for encryption and decryption of the payload.

Network session key:

Network session key, used for interaction between the Node and the Network Server.

ADR ON/ADR OFF:

Adaptive data rate on or off. ADR will optimize power consumption by finding the lowest power transmission settings while ensuring that messages are still received at gateways. ADR off is advised for applications where the device is continuously moving.

Spreading factor:

LoRa is based on CSS (chirp spread spectrum) technology. The spreading factor controls the chirp rate. A lower spreading factor will result in faster chirps, a higher transmission rate and a reduction of range.

A higher spreading factor will result in a longer time-on-air and more power consumption.

Please refer to lora-alliance.org for more information.

Frequency Sub-Band:


This option will only show for the 902-928 version of the Ranos dB. Used to set the correct sub-band for the local frequency plan and/or your gateway.

Correction:

Correction value applied to the overall input microphone signal. Used to adjust the displayed sound level when a sound calibrator has been applied to the microphone. When using the automatic calibration function, this field is set automatically.

Enable LED:

Enables the LED status indication inside of the externally accessible power switch and on the PCB.

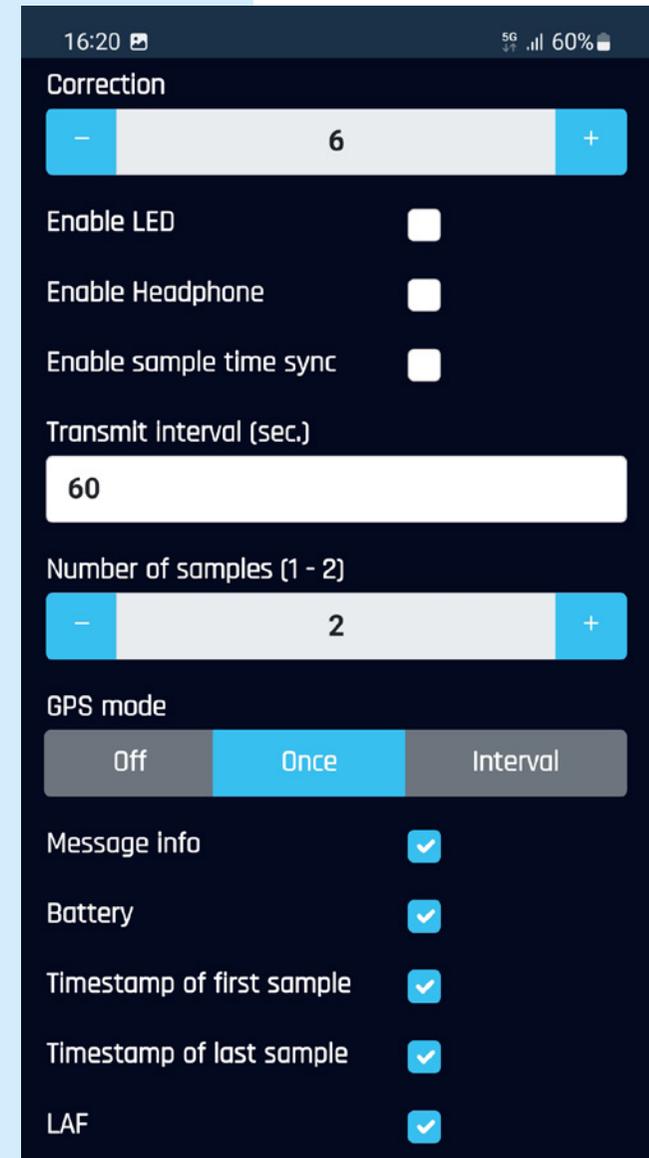

Enable Headphone:

Enables the headphone output on the PCB. Used for test and calibration purposes. This connection is not accessible from outside of the housing. This setting will cause extra current draw (although minimal).

Enable sample synchronization:

Synchronize multiple Ranos dB' by enabling this function. The "Transmit interval" and "Number of samples" needs to be equal for the Ranos dB' that need to be synchronized.

The Ranos dB collects the selected amount of "Number of samples" in between two "Transmit interval". The samples are collected evenly spaced in time. After all samples have been collected, the samples will be transmitted right before starting a new sampling cycle.

Once a GPS time fix (Unix Epoch) has been obtained and the last sampling cycle has been transmitted, the Ranos dB will calculate the next coming start moment of the new sampling cycle relative to if the Unix Epoch time was the start time of the sampling cycles. The Ranos dB will wait until this moment and the sampling cycle is then restarted. This ensures that the sample moment for Ranos dB' with the same "Transmit interval" and "Number of samples" will be synchronous.

After the first synchronization moment, the internal RTC time will be re-synchronized from the GPS time every 12 hours. The actual resynchronization will take place right after the first LoRa transmission after 12 hours have passed.

Transmit interval:

This setting sets the interval in seconds between each LoRa transmission. Limited by local regulations.

Number of samples:

Sets the number of samples contained in each transmission. The sample interval, calculated from transmit interval divided by number of samples in the payload also sets the LAeq and LCeq averaging time.

GPS mode:

Sets the GPS location acquisition mode.

OFF:

If the timestamp is enabled the sensor will try to obtain the GPS time upon startup. The GPS will check for time every minute until a fix is found. If the timestamp is enabled, the GPS will be activated every 12 hours for 5 minutes to resynchronize internal time.

ONCE:

Upon startup the sensor will try to obtain a GPS location and time. The GPS will check for time and location every minute until a fix is found. If the timestamp is enabled, the GPS will be activated every 12 hours for 5 minutes to resynchronize internal time.

INTERVAL:

The GPS will try to obtain time and location at the set interval.

The GPS will be turned on for 5 minutes each time.

Message info:

Includes information about the composition of the payload when enabled. Please refer to the payload description document on our website: iotsoundsensor.com/lora-payload-description

LAfast:

A frequency weighted, fast time weighted sound level. Momentary value taken at the sample time.

LAslow:

A frequency weighted, slow time weighted sound level. Momentary value taken at the sample time.

LCfast:

C frequency weighted, fast time weighted sound level. Momentary value taken at the sample time.

LCslow:

C frequency weighted, slow time weighted sound level. Momentary value taken at the sample time.

LAeq:

A frequency weighted, equivalent continuous sound level over the set sample interval (transmit interval divided by number of samples).

LCeq:

C frequency weighted, equivalent continuous sound level over the set sample interval (transmit interval divided by number of samples).

LAFmax:

Maximum A frequency weighted, fast time weighted sound level over the set sample interval (transmit interval divided by number of samples).

16:20 5G 60%

LAS
 LCF
 LCS
 LAeq
 LCeq
 LAFmax
 LAFmin
 LCFmax
 LCFmin

Save

Payload length: 320 bits

	16	8	32	32	16	16	10
Message info							
Battery							
Latitude							
Longitude							
First timestamp							
Last timestamp							
Lfast							

LAFmin:

Minimum A frequency weighted, fast time weighted sound level over the set sample interval (transmit interval divided by number of samples).

LCFmax:

Maximum C frequency weighted, fast time weighted sound level over the set sample interval (transmit interval divided by number of samples).

LCFmin:

Minimum C frequency weighted, fast time weighted sound level over the set sample interval (transmit interval divided by number of samples).

Battery:

Battery voltage measured directly on the battery input connector. Please note that the voltage of the battery fluctuates while it is being charged from solar power. The measured battery voltage is accurate at night, when the battery is not being charged. The battery charge state versus battery voltage curve is not

linear, so the battery charge state cannot be calculated 100% accurately from just the battery voltage alone. A rough estimate can however be calculated from the battery voltage (when not being charged) using the following formula: $100 - ((6.5 - \text{measured voltage}) / ((6.5 - 5.25) / 100))$

Timestamp (of first sample):

Includes the capture time of the first sample in the payload.

Timestamp of last sample:

Available when the number of samples is higher than 1. Includes the capture time of the last sample in the payload. Samples in between the first and last time stamp are equally spaced in time. Enabling "Timestamp of first sample" and "Timestamp of last sample" allows accurate calculation of the time of the in between samples.

Payload length:

Shows the resulting payload length in bytes.

Connect App: "Ranos live" page

The second tab, "ranos live", is where real time measurements are monitored. One Ranos dB that is connected via USB is supported at a time. This interface is mainly used for testing and calibration, but it is great as a temporary working display as well. When the "ranos live" tab is opened, the LoRa routine is disabled and the GPS checks a location every 5 minutes.

The top graph displays the selected measurements. Each line is color coded to correspond with its numeric measurement quantity box below the graph. The numeric measurement quantities have a resolution of 0,1 dB and the update rate is 100ms. The boxes below the graph can be clicked to exclude the measurement from the graph.

Boxes filled with background color are not graphed and are displayed numerically only. The measurements should be valid (within specifications) within 10 seconds after opening the "ranos live" page. The Ranos dB will continue back to normal operation for use via LoRa automatically within 30 seconds after exiting the "ranos live" page.

In case of an overload or under range condition, a flag with time and detected level of the most recent condition will be displayed below the measurements.

The map below the graph and numeric value boxes will show the location of the Ranos dB found by the GPS.



Available measurements

LFast

A frequency weighted, fast time weighted sound level.

LAslow

A frequency weighted, slow time weighted sound level.

LAeq

A frequency weighted, equivalent continuous sound level over the set sample interval. The resulting set time interval is displayed above the graph. The measurement will be re-initiated when switching to another page and back.

LAFmin

Minimum A frequency weighted, fast time weighted sound level over the set sample interval. Automatically resets at every new sample interval. The last reset time is displayed in the "Timestamp" box below the graph.

LAFmax

Maximum A frequency weighted, fast time weighted sound level over the set sample interval. Automatically resets at every new sample interval. The last reset time is displayed in the "Timestamp" box below the graph.

LCfast

C frequency weighted, fast time weighted sound level.

LCslow

C frequency weighted, slow time weighted sound level.

LCeq

C frequency weighted, equivalent continuous sound level over the set sample interval. The resulting set time interval is displayed above the graph. The measurement will be re-initiated when switching to another page and back.

LCFmin

Minimum C frequency weighted, fast time weighted sound level over the set sample interval. Automatically resets at every new sample interval. The last reset time is displayed in the "Timestamp" box below the graph.

LCFmax

Maximum C frequency weighted, fast time weighted sound level over the set sample interval. Automatically resets at every new sample interval. The last reset time is displayed in the "Timestamp" box below the graph.

Timestamp

Displays start time of the current running period over which the maximum and minimum values are calculated.

Battery

Battery voltage measured directly on the battery input connector.

Extra available measurements via calibration settings

LZfast

Z frequency weighted, fast time weighted sound level.

LZslow

Z frequency weighted, slow time weighted sound level.

LZeq

Z frequency weighted, equivalent continuous sound level over the set sample interval. The resulting set time interval is displayed above the graph. The measurement will be re-initiated when switching to another page and back.

LZFmin

Minimum Z frequency weighted, fast time weighted sound level over the set sample interval. Automatically resets at every new sample interval. The last reset time is displayed in the "Timestamp" box below the graph.

LZFmax

Maximum Z frequency weighted, fast time weighted sound level over the set sample interval. Automatically resets at every new sample interval. The last reset time is displayed in the "Timestamp" box below the graph.

LCpeak

C frequency weighted, peak time weighted sound level.

LCpeak_min

Minimum C frequency weighted, peak time weighted sound level over the set sample interval. Automatically resets at every new sample interval. The last reset time is displayed in the "Timestamp" box below the graph.

LCpeak_max

Maximum C frequency weighted, peak time weighted sound level over the set sample interval. Automatically resets at every new sample interval. The last reset time is displayed in the "Timestamp" box below the graph.

LZpeak

Z frequency weighted, peak time weighted sound level.

LZpeak_min

Minimum Z frequency weighted, peak time weighted sound level over the set sample interval. Automatically resets at every new sample interval. The last reset time is displayed in the "Timestamp" box below the graph.

LZpeak_max

Maximum Z frequency weighted, peak time weighted sound level over the set sample interval. Automatically resets at every new sample interval. The last reset time is displayed in the "Timestamp" box below the graph.

LAslow_min

Minimum A frequency weighted, slow time weighted sound level over the set sample interval. Automatically resets at every new sample interval. The last reset time is displayed in the "Timestamp" box below the graph.

LAslow_max

Maximum A frequency weighted, slow time weighted sound level over the set sample interval. Automatically resets at every new sample interval. The last reset time is displayed in the “Timestamp” box below the graph.

LAeq_min

Minimum A frequency weighted, equivalent continuous sound level over the set sample interval. Automatically resets at every new sample interval. The last reset time is displayed in the “Timestamp” box below the graph. The measurement will be re-initiated when switching to another page and back.

LAeq_max

Maximum A frequency weighted, equivalent continuous sound level over the set sample interval. Automatically resets at every new sample interval. The last reset time is displayed in the “Timestamp” box below the graph. The measurement will be re-initiated when switching to another page and back.

LCslow_min

Minimum C frequency weighted, slow time weighted sound level over the set sample interval. Automatically resets at every new sample interval. The last reset time is displayed in the “Timestamp” box below the graph.

LCslow_max

Maximum C frequency weighted, slow time weighted sound level over the set sample interval. Automatically resets at every new sample interval. The last reset time is displayed in the “Timestamp” box below the graph.

LCeq_min

Minimum C frequency weighted, equivalent continuous sound level over the set sample interval. Automatically resets at every new sample interval. The last reset time is displayed in the “Timestamp” box below the graph.

LReq_max

Maximum C frequency weighted, equivalent continuous sound level over the set sample interval. Automatically resets at every new sample interval. The last reset time is displayed in the "Timestamp" box below the graph.

LZslow_min

Minimum Z frequency weighted, slow time weighted sound level over the set sample interval. Automatically resets at every new sample interval. The last reset time is displayed in the "Timestamp" box below the graph.

LZslow_max

Maximum Z frequency weighted, slow time weighted sound level over the set sample interval. Automatically resets at every new sample interval. The last reset time is displayed in the "Timestamp" box below the graph.

LReq_min

Minimum Z frequency weighted, equivalent continuous sound level over the set sample interval. Automatically resets at every new sample interval. The last reset time is displayed in the "Timestamp" box below the graph.

LReq_max

Maximum Z frequency weighted, equivalent continuous sound level over the set sample interval. Automatically resets at every new sample interval. The last reset time is displayed in the "Timestamp" box below the graph.

Battery

The battery voltage that is displayed is measured directly on the battery input connector. The voltage of the battery fluctuates while it is being charged from solar power. The measured battery voltage is accurate when there is no light on the solar panel, when the battery

is not being charged. The battery charge state versus battery voltage curve is not linear, so the battery charge state cannot be calculated 100% accurately from just the battery voltage alone. A rough estimate can however be calculated from the battery voltage (when not being charged) using the following formula: $100 - ((6,5 - \text{measured voltage}) / ((6,5 - 5,25) / 100))$.

A battery voltage of 5,5VDC at the start of a use period without charging via solar power is sufficient for at least 6 hours of working time. The Ranos dB performance does not degrade or change with battery voltage, but the Ranos dB will cut off system power at around 4,5VDC. Stated voltages are for a measured battery voltage when it is not being charged. The Ranos dB will conform to specifications with a power supply (battery) voltage ranging from 4,5 to 7VDC.

Overload

An overload flag will be displayed before the Ranos is outside of its linear range. The flag will latch on and will display the time and level of the most recent overload condition. The level of the detected overload condition might not be accurate if it is far above the upper limit of the operating range. An overload flag can be cleared by pressing X in the right corner of the flag.

The MMDB1 and MMDB2 microphones are the limiting factor in the Ranos' upper limit of its level range. The microphones will start to deviate from linearity at a level higher than LZpeak 123 dB for any frequency between 20 Hz – 20 kHz. The overload detector consists of an LZpeak measurement at the Ranos input, a measured value of over LZpeak 123 dB should cause an overload flag for any frequency between 20 Hz – 20 kHz.

The overload function is not affected by excluding LZpeak from the “ranos live” page or from the “ranos settings” page.

Under range

An under range flag will be displayed when the measured sound pressure level is less than the acoustical lower boundary for the acoustical linear operating range of LCSlow when using the the MMDB1 or MMDB2 microphone. The set value is LCSlow 42dB.

The under range function is not affected by excluding LCSlow measurement from the “ranos live” page or from the “ranos settings” page. However, when the C weighting is bypassed for testing and/or calibration via the “ranos calibration” page, the C weighting for the under range detector will also be bypassed, making it more sensitive to low frequency noise.

Connect App: “Ranos info” page

The “ranos info” page is where miscellaneous info and utilities can be found.

Firmware version:

At the top you will find a bar that displays the current firmware version. If a new firmware is available, it will become available for install from here.

Logging

Below the firmware version and update bar you will find three buttons: “Start log”, “Clear log” and “Save log”.

- Start log: allows the user to see the Ranos dB software routines in case of testing or troubleshooting. After starting the log, the button text changes to “Stop log”. Click the button again to stop the log.
- Clear log: clears the displayed log data.
- Save log: saves the collected data that is displayed to the Dutch Sensor Systems database. This can be useful when support from Dutch Sensor Systems is required.

Connect App: “Ranos calibration” page

The “ranos calibration” page enables more types of measurements for the “ranos live” page by changing the internal DSP signal routing. Active settings will be displayed while working in the “ranos live” page. Any made settings in the calibration page will be cleared after disconnecting the Ranos or after 30 seconds of inactivity outside of the “ranos live” page. This ensures the altered DSP routing is always temporary and does not affect normal operation via LoRa.

Min/Max source A

Set the source data for the calculation of the A weighted minimum and maximum sound levels to Fast (LA-fast), Slow (LA-slow) or EQ (LA-eq).

Min/Max source C

Set the source data for the calculation of the C weighted minimum and maximum sound levels to Fast (LA-fast), Slow (LA-slow) or EQ (LA-eq).

Bypass A

Bypasses the A frequency weighting filter, effectively turning them into Z frequency weighted measurements.

Bypass C

Bypasses the C frequency weighting filter, effectively turning them into Z frequency weighted measurements. The under range detection processing will be affected by enabling.

Bypass FIR

Bypasses the FIR microphone correction filter.

LCfast to LCpeak

Changes the LCfast measurement into an LCpeak measurement.

Manual reset

Disables the minimum and maximum value hold automatic reset and enables a button in the “ranos live” page to manually reset the held

values. Meant for use during testing of time weightings and electrical linearity. Manual reset does not clear overload or under range flags. The actual reset will take place within 2 seconds after operating the reset function.

Write

Writes the calibration settings to the DSP.

Clear

Clears the calibration settings from the DSP and puts the Ranos back into normal operating mode.

Specifications

General	
Applicable standards	IEC 61672-1:2014
Performance class	Ranos dB 1: class 1 with MMDB1 microphone Ranos dB: class 2 with MMDB2 microphone
RF immunity group	group X
CE marking:	yes

Microphones, preamp and conversion

Microphones	<p>Microphone</p> <p>Performance class:</p> <p>Type:</p> <p>Sound field:</p> <p>IP rating:</p> <p>Frequency range:</p> <p>Freq. resp. calibration:</p> <p>Output impedance:</p> <p>Sensitivity:</p> <p>Reference SPL:</p> <p>Reference point:</p> <p>Reference direction:</p> <p>SPL before damage:</p>	<p>MMDB1</p> <p>class 1</p> <p>electret condenser</p> <p>freefield</p> <p>IP67</p> <p>20 Hz – 20 kHz</p> <p>Yes</p> <p>2,2k</p> <p>12,6 mV/Pa (-38dB re 1V/Pa)</p> <p>94 dB</p> <p>center of microphone diaphragm</p> <p>0 degrees</p> <p>140 dB</p>	<p>MMDB2</p> <p>class 2</p> <p>electret condenser</p> <p>freefield</p> <p>IP67</p> <p>20 Hz – 20 kHz</p> <p>No</p> <p>2,2k</p> <p>12,6 mV/Pa (-38dB re 1V/Pa)</p> <p>94 dB</p> <p>center of microphone diaphragm</p> <p>0 degrees</p> <p>140 dB</p>
Microphone preamplifier	<p>Integrated, not removable</p> <p>Gain nominally set for MMDB1 and MMDB1 microphones</p> <p>-6 to 6dB gain or attenuation in 0,1dB steps for calibration</p> <p>Input sensitivity: 48,08 mV/Pa or -26,36 dB re 1V/Pa</p> <p>Input impedance: 40k Ohm</p> <p>Input voltage range: 1Vrms (2,83Vp-p)</p> <p>Input bias voltage: 2,97V</p> <p>Input max. bias current: 3mA</p>		

AD and DA conversion	Samplerate: 48 kHz Bitdepth: 24 bit Frequency response: +/-0,05dB 3Hz – 20kHz
----------------------	---

Processing

Processing type	Digital (everything after signal conditioning, preamp, ADC)		
Processing rate	48 kHz		
Processing precision	56 bit		
Microphone correction filter	200 tap FIR filter, pre-set by Dutch Sensor Systems		
Measurement quantities		Available in Connect App (cable connection)	Available in Connect Dashboard (wireless connection)
	LAfast	✓	✓
	LAslow	✓	✓
	LAeq	✓	✓
	LAFmin	✓	✓
	LAFmax	✓	✓
	LCfast	✓	✓
	LCslow	✓	✓
	LCEq	✓	✓
	LCFmin	✓	✓
	LCFmax	✓	
	LZfast	✓	
	LZslow	✓	
	LZeq	✓	

Measurement specifications

Level ranges	Single level range 40 – 120 dB(A)						
Measurement range: (LXF, LXS, LXeq, electrical)	Freq.	A low	A up	C low	C up	Z low	Z up
	31,5	38	80,6	37	117	49	120
	500	41	116,8	38	120	47	120
	1000	40	120	38	120	49	120
	4000	40	121	37	119,2	49	120
	8000	40	119	40	117	45	120
	12500	41	115,7	40	113,8	49	120
Measurement range: (LCpeak, 1 kHz, electrical)	LA	LC		LZ		LCpeak	LZpeak
	Upper	120	120	120	123	123	123
	Lower	40	38	49	47	47	54
Noise floor (electrical)	31 dB(A) 34 dB(C) 42 dB(Z)						
Noise floor (acoustical)	37,2 dB(A) 42 dB(C) 58,7 dB(Z)						

System	
Display	Connect App: one Android OS device or a Windows OS PC via physical USB connection. For configuration, testing, calibration and temporary display. Connect Dashboard: unlimited amount of display devices via web browser. For display, device management, project management and remote configuration.
Language	English
Externally accessible inputs and outputs	1 microphone input (3 pin female, Hirose) 1 USB-B female
Internal connections for special purposes	1 analog audio output (920 mVAC RMS max.) Various I/O's: UART, SPI, I2C, 3,3VDC logic, PWM
RF	LoRa: 868 or 915 Mhz, antenna integrated GPS: multi constellation, GPS, Galileo, GLONASS, antenna integrated
Battery	1x 6VDC, 12Ah sealed lead acid battery, Yuasa NP12-6 is preferred
Battery voltage range	4,5 to 7VDC
Battery life	At least two weeks from a full battery, without additional solar charging
Battery life cycle	1 year minimum
External power	None, solar power only

Physical


Weight	3,8 kg (including battery and microphone, excluding pole mount)
Size	Ranos dB: 271,5 x 246 x 408 mm (D x W x H, including rubber feet and microphone, H = 209 excluding microphone) Microphones MMDB1 and MMDB2: 333 x 12,7 mm (L x D)
IP rating	IP67
Mounting options	Polemount, wallmount, tabletop
Accessories	<p>Scope of delivery</p> <p>Housing lid and screws Microphone Microphone clamps and screws Microphone windscreen Recess cover Pole mount, hose clamps and screws Rubber feet USB A male - USB B male cable 1m (USBAB1) USB C male - USB A female (USBCAOTG) USB Micro-B - USB A female (USBMBAOTG)</p> <p>Optional cables</p> <p>Dummy microphone (DM1) Microphone extension cable 1,5m (MEC015) Microphone extension cable 3m (MEC030) Microphone extension cable 5m (MEC050)</p> <p>Optional mounting accessories</p> <p>Wallmount (WM1) Microphone extension mount (MEM1) Microphone extension mount (MEM2)</p>

Reference environmental conditions

Air temperature 23 °C | Static pressure 101,325 kPa | Relative humidity 50 %.

Reference orientation	Upright
Size	Ranos dB: 271,5 x 246 x 408 mm (D x W x H, including rubber feet and microphone, H = 209 excluding microphone) Microphones MMDB1 and MMDB2: 333 x 12,7 mm (L x D)
Operating temperature	-10 to +50 degrees Celcius
Storage temperature	-20 to +60 degrees Celsius
Humidity	Up to 95% RH non- condensing
Electromagnetic performance	CE

Dimensions in mm

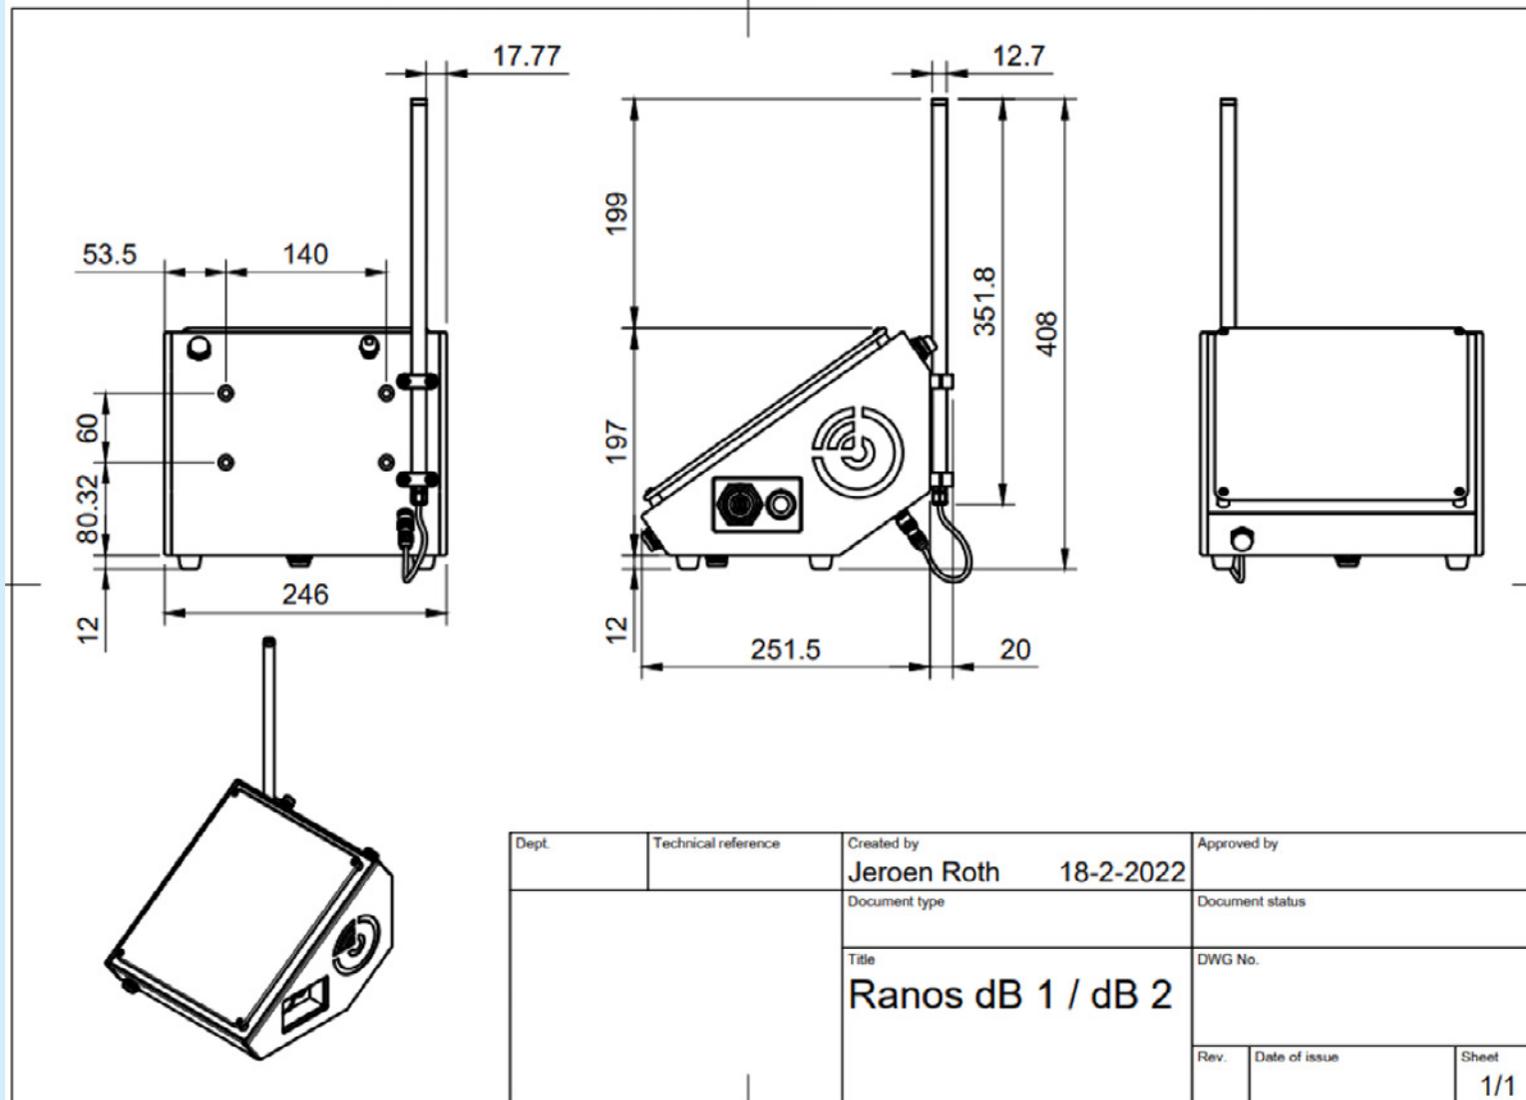

Dept.	Technical reference	Created by Jeroen Roth	18-2-2022	Approved by
		Document type		Document status
		Title Ranos dB 1 / dB 2		DWG No.
		Rev.	Date of issue	Sheet 1/1

Dutch Sensor Systems B.V.

Antennestraat 64-66

1322 AS Almete

The Netherlands

KVK 78671779

BTW NL861491014B01

IBAN NL41 RABO 0359 8457 46

