

WiMOD LoRaWAN EndNode Modem Firmware

Feature Specification Version 2.2

Document ID: 4100/40140/0089

IMST GmbH

Carl-Friedrich-Gauß-Str. 2-4
47475 KAMP-LINTFORT
GERMANY



Document Information

File name	WiMOD_LoRaWAN_EndNode_Modem_Feature_Spec.docx
Created	2015-09-14
Total pages	26

Revision History

Version	Note
0.1	Created, Initial Version
0.2	Draft Version Created For Review
0.3	Preliminary Version
1.0	First Release
1.1	Chapter 1 updated for Test Application Chapter 2 and 3 added
1.2	Chapter 4 added
1.3	Chapter 2.9 updated
1.4	Chapter 2.3 and Chapter 2.9 updated
1.5	Chapter 2.3 and Chapter 2.9 updated
1.6	Chapter 1.1 and 2.5 updated for multi band support
1.7	Chapter 2.9 updated for current consumption diagram
1.8	Chapter 1 updated for LoRaWAN Specification V1.0.1 Chapter 2.10 added for activation parameters
1.9	Chapter 2.1 updated for recommendation
1.10	Chapter 2.9 updated for current consumption information
1.11	Chapter 2.5 updated
1.12	Chapter 2.1 and 2.3 updated
2.0	Structure of document changed Updated for additional clarifications: e.g. frame counter, RF gain
2.1	Chapter 2.3.2 updated for frame pending bit
2.2	Chapter 2.2.2 and 2.3.4 for RF Gain and EIRP settings Chapter 5.1 added with examples for RF Gain settings

Aim of this Document

This document outlines the WiMOD LoRaWAN EndNode Modem firmware features. This firmware is designed for the WiMOD radio module family (e.g. iM880A-L, iM880B-L, iU880A, iM881A).

Table of Contents

1. OVERVIEW	5
2. FUNCTIONAL DESCRIPTION	6
2.1 General Services	6
2.1.1 Firmware Update	6
2.2 Customization Services	6
2.2.1 Device EUI	6
2.2.2 RF Gain	6
2.3 LoRaWAN Services	7
2.3.1 Device Activation	7
2.3.2 Data Exchange	8
2.3.3 MAC Commands	10
2.3.4 Device Configuration	10
3. SEQUENCE CHARTS	12
3.1 Join Procedure	12
3.2 Unconfirmed Data Retransmission	13
3.3 Confirmed Data Retransmission	14
3.4 Duty Cycle	15
3.5 Message Acknowledge Procedure	16
3.6 Frame Pending Bit	17
3.7 MAC Commands	18
3.7.1 MAC Commands - Piggybacked in Header	18
3.7.2 MAC Commands - Port 0	19
4. KNOWN LIMITATIONS	20
5. APPENDIX	21
5.1 RF Gain Examples	21
5.1.1 iM880B-L Radio Module configured in EU868 band	21
5.1.2 iM880B-L Radio Module configured in IN865 band	21
5.1.3 iM881A Radio Module configured in EU868 band	21

5.1.4	iM881A Radio Module configured in IN865 band	22
5.2	List of Abbreviations	22
5.3	List of References	23
5.4	List of Figures	23
6.	REGULATORY COMPLIANCE INFORMATION	24
7.	IMPORTANT NOTICE	25
7.1	Disclaimer	25
7.2	Contact Information	25

1. Overview

The WiMOD LoRaWAN EndNode Modem firmware provides the following features:

- Compliant to LoRaWAN Specification V1.0.1
- Supports Class A and Class C (only unicast messages supported)
- Over The Air Activation (OTAA) and Activation By Personalization (ABP)
- Multitasking Operating System WiMOD-OS with Automatic Power Saving (APS)
- Host Controller Interface (HCI) for access to radio functions & parameters (see[1])
- EndNode Test Application required for the certification process
- Multi Band support

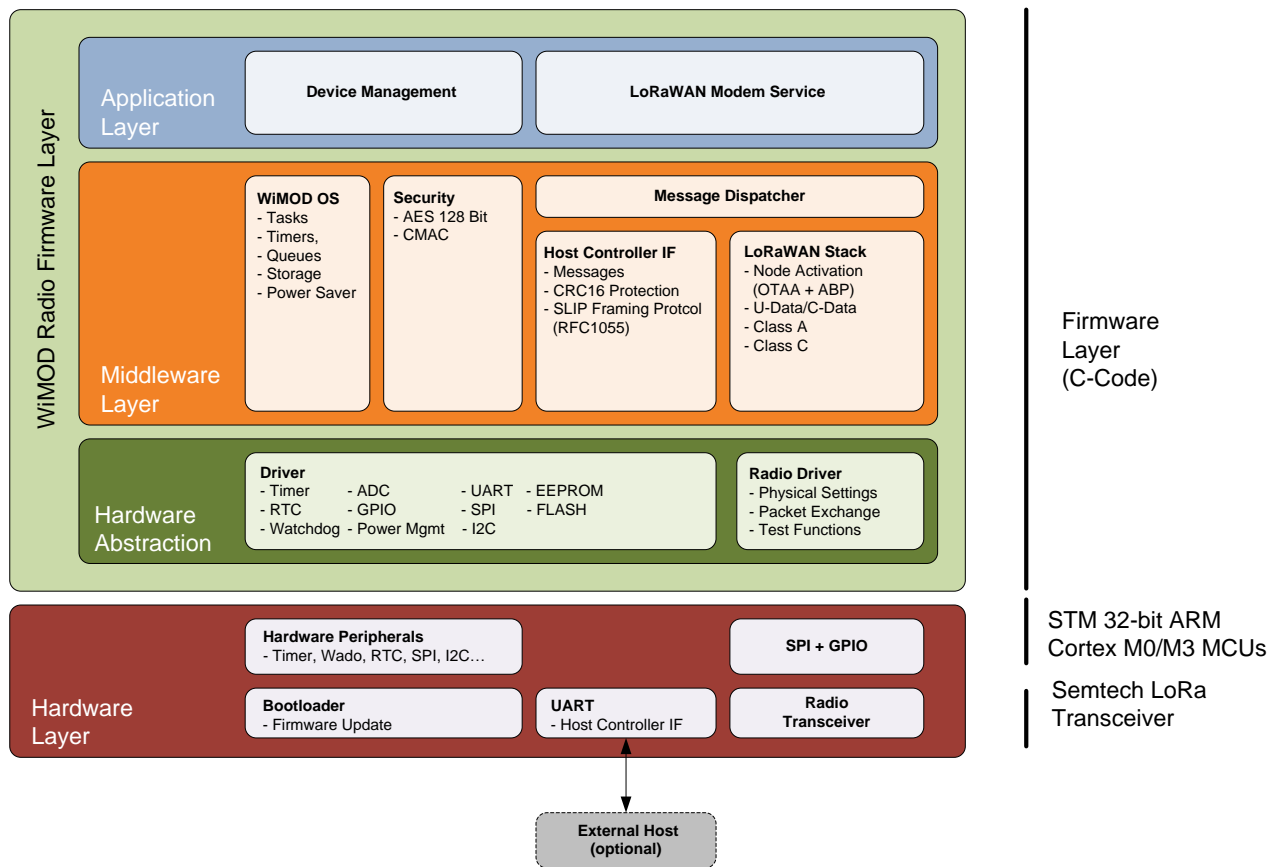


Fig. 1-1: WiMOD LoRaWAN EnNode Modem Firmware Architecture

2. Functional description

This chapter explains several points to clarify the functionality of the WiMOD LoRaWAN EndNode Modem firmware.

2.1 General Services

The Device Management component provides general services for module configuration, module identification, and everything which is not related to the radio data exchange.

The main features are:

- Information elements for identification purposes (e.g. module type, device ID)
- Identification of the firmware version (FW version, build count, build date, FW name)
- Real Time Clock handling
- System Operation Modes (e.g. application mode, customer mode)
- Firmware Update

2.1.1 Firmware Update

The end-device offers a fully automatic activation of the bootloader via the HCI interface, which could be used for future firmware updates.

2.2 Customization Services

This feature offers the configuration of some customization parameters for the end-device. For this, the Customer Mode should be selected.

2.2.1 Device EUI

The end-device provides the services for read-out and configuration of the 64-bit unique Device EUI required by the LoRaWAN specification.

2.2.2 RF Gain

The RF gain defines an offset used to compensate possible transmission losses/gains in the final product (including circuit, matching, antennas...). This value should be rated in units of dBd (decibels relative to a half-wavelength dipole antenna, where $0dBd=2.15dBi$).

It is recommended to set this constant before the radio stack parameters to ensure a correct configuration of the device.

For more details refer to the appendix (5.1), which contains some examples for possible configurations. The most important parameters related to this feature are:

- **Max. RF Power**
maximum RF output power corresponding to the module to be used (for more

information refer to the corresponding hardware datasheet, e.g. see [2]).

- **Max. allowed EIRP**

maximum allowed EIRP for the selected band, e.g. EU868, IN865. (see [3] for more details).

- **RF Gain**

configured RF gain related to the final product.

- **Max. EIRP**

maximum EIRP available for the final product. This value is calculated as following:

$$\text{Max. EIRP} = \text{MIN} (\text{Max. allowed EIRP}, \text{Max. RF Power} + \text{RF Gain} + 2.15\text{dB})$$

- **Configured EIRP**

EIRP configured for the next uplink radio message.

- **Configured TRX power**

transmitted power to be configured in the transceiver to achieve the configured EIRP.

The firmware considers that: $\text{EIRP} = \text{TRX Power} + \text{RF Gain} + \sim 2\text{dB}$

2.3 LoRaWAN Services

2.3.1 Device Activation

An end-device must be activated before it can communicate with a server. Two activation options are supported: Activation By Personalization (ABP) and Over The Air Activation (OTAA).

2.3.1.1 Activation By Personalization (ABP)

The activation parameters must be known on both sides - the end-device and the LoRaWAN network. The following parameters are required:

- Device Address
- Network Session Key: used for MIC calculation and verification
- Application Session Key: used to encrypt and decrypt the payload field of application specific messages

After a successful activation, the end-device will send an empty unconfirmed uplink message ("alive" message) over the air.

2.3.1.2 Over The Air Activation (OTAA)

The end-device can be configured and triggered to execute the so called join procedure defined in the LoRaWAN specification. The result of a successful join procedure is a new device address, a new network session key and a new application session key.

The following parameters are required:

- Device EUI: this parameter can only be written in *Customer Mode*
- Application EUI
- Application Key

The end-device uses the frequencies defined by the corresponding radio band (see [1] for radio band configuration) to broadcast the JoinReq message. Note that these transmissions follow the duty-cycle requirements, even if this is deactivated.

The join request will be retransmitted on a new frequency channel if no join accept message is received. The first transmission happens with DR5. Each data rate will be used twice and will be lowered after that (see 3.1).

After a successful activation of the end-device, it will send an empty LoRaWAN frame. For this, the already stored radio stack configuration (e.g. data rate, tx power) will be used. Note that in case a data rate, which remains invalid in the default channel configuration, is selected, the next lower available data rate will be used (e.g. SF7BW125 instead of FSK or SF7BW250, in EU686 MHz band).

2.3.1.3 Activation Parameters

The parameters required for Over The Air Activation and Activation By Personalization are configurable via HCI interface. These parameters are not readable and they are stored in encrypted form in a non-volatile memory to resist a power cycle.

2.3.2 Data Exchange

2.3.2.1 Uplink Services

2.3.2.1.1 Uplink Unreliable Data Transmission

The end-device could send data in an unreliable way to the network server. This requires no acknowledgement from the network server.

If the end-device is configured to retransmit the unconfirmed data frames and an unconfirmed data frame is sent, a new transmission is not allowed before it either has received a downlink message or the second receive window of the last retransmission is expired.

The data frame will be retransmitted on a new frequency but using the same data rate (see 3.2).

2.3.2.1.2 Reliable Data Transmission

The end-device could send data in a reliable way to the network server. The server will acknowledge the received packet within the defined downlink timeslots.

The end-device uses the retransmission procedure recommended in the LoRaWAN specification. In the absence of the acknowledgement the end-device will try to retransmit the same data again, with a maximum number of retries. The frame will be retransmitted on a new frequency channel. Each data rate will be used twice and will be lowered after

that till DR0 is achieved (see 3.3).

The maximum number of retransmissions to be sent can be changed in the end-device configuration (see [1]). The maximum value allowed is 254.

If the retransmission procedure finishes without success (e.g. maximum number of retransmission achieved or maximum payload size exceeded for the selected data rate), the corresponding error code will be sent (see [1]).

2.3.2.1.3 Duty Cycle

A new transmission is not allowed if all channels are blocked by duty cycle. The application should try to send the data again (see 3.4).

2.3.2.1.4 Payload Size

The maximum length of the LoRaWAN message is limited according to the maximum payload size defined in the LoRaWAN specification (see [3]). In case the application data exceeds these limits the corresponding error code will be returned (see [1]).

2.3.2.2 Downlink Service

The end-device is able to receive packets within dedicated Rx timeslots scheduled as defined in the LoRaWAN specification.

Depending on the type of received or not received data, the corresponding messages will be sent to the Host.

2.3.2.2.1 Message Acknowledge Bit

The end-device will transmit an acknowledgement using an empty data message immediately after the reception of a data message requiring a confirmation. A new transmission is not allowed before it either has received a downlink message or the second receive window is expired (see 3.5).

2.3.2.2.2 Frame Pending Bit

The frame pending bit functionality is implemented according to the LoRaWAN specification. An empty frame will be sent immediately after the reception of a data message with the frame pending bit set to 1. A new transmission is not allowed before the reception of a data message with a frame pending bit set to 0 (see 3.6). The maximum number of empty frames to be sent is limited to 2.

2.3.2.3 Frame Counter

The end-device implements a 16 bit frame counter.

2.3.3 MAC Commands

The end-device supports the MAC commands defined in the LoRaWAN specification.

2.3.3.1 MAC Commands Request

The end-device allows the transmission of a MAC command request, either piggybacked in the header or in the Payload field with the Port field being set to 0.

2.3.3.2 MAC Commands Response

The end-device will send the answer to the MAC commands piggybacked within the next uplink. If this is not possible because they exceed the length of 15 bytes, they will be sent immediately using the port 0 (see 3.7).

2.3.4 Device Configuration

The end-device provides several features and parameters which can be configured under the radio stack configuration. The main parameters are:

- Band Selection: e.g. EU868, IN865
- Uplink Data Rate
- Tx Power Level (EIRP): radiated power (EIRP) to be configured
- Adaptive Data Rate: used to allow an automatic data rate adaption from server side
- Automatic Power Saving
- Duty Cycle Control: the duty cycle may be disabled for testing purposes
- Class A & Class C Selection
- Number of Retransmissions: this value sets the maximum number of retries for a reliable radio packet where an acknowledgment is not received

Some of these parameters, like the uplink data rate and the transmitted power level, are only used for unreliable and confirmed data messages (not join message). These values are used in the next uplink and may change automatically during runtime or via LoRaWAN MAC commands from network server side.

If the configured parameters are not allowed an error code will indicate that there is a wrong parameter. In this case, it is recommended to check that the uplink data rate and the transmitted power level are compatible with the selected band.

2.3.4.1 Automatic Power Saving

In case the Automatic Power Saving is enabled, the end-device will enter low power mode whenever possible and the current consumption will be reduced to a typical low power current in the range of 1.4 μ A to 1.8 μ A depending on the given hardware module, where the RTC remains running (for more information refer to the corresponding hardware datasheet, e.g. see [2]).

Note that if class C support is enabled the current consumption will increase to a typical

value of 11.2mA due to the continuously listening mode.

The end-device does not enter low power mode direct after a transmission and this is not enabled before it either has received a downlink message or the second receive window is expired (no Rx indication).

The following picture shows an example of a voltage graph measured at a 27 Ω resistor on a iM880B-L module, including the current consumption of each state.

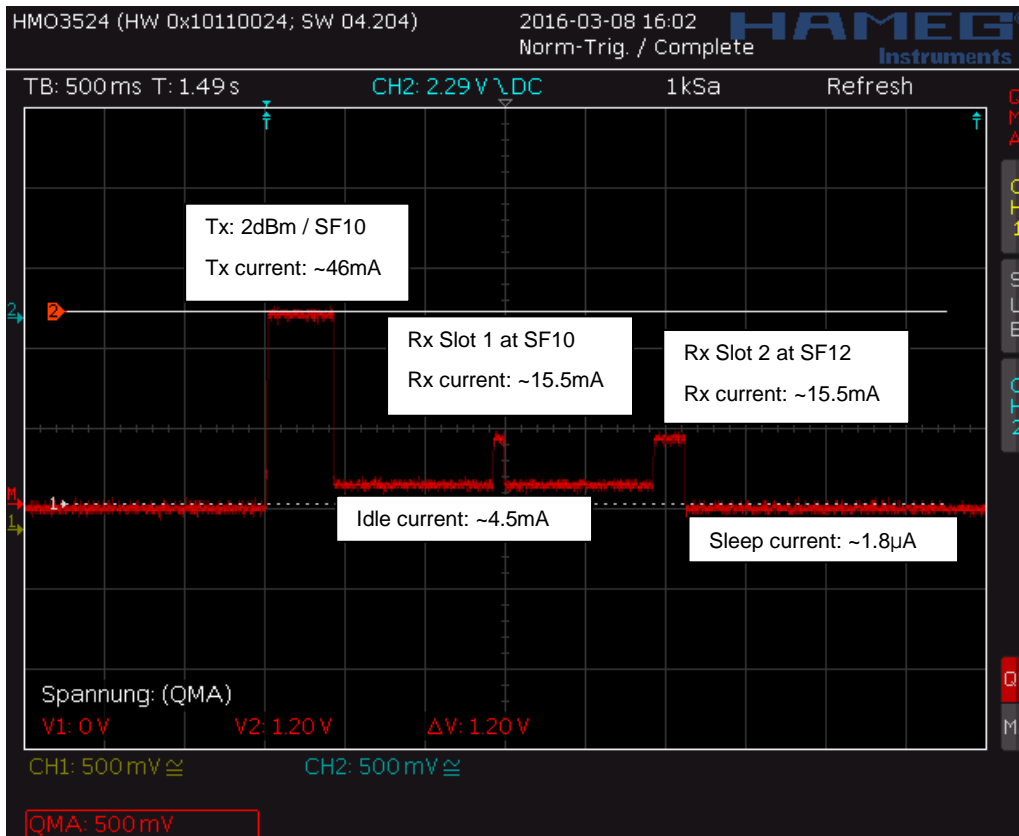


Fig. 2-1: Current Consumption Diagram - iM880B-L

3. Sequence Charts

3.1 Join Procedure

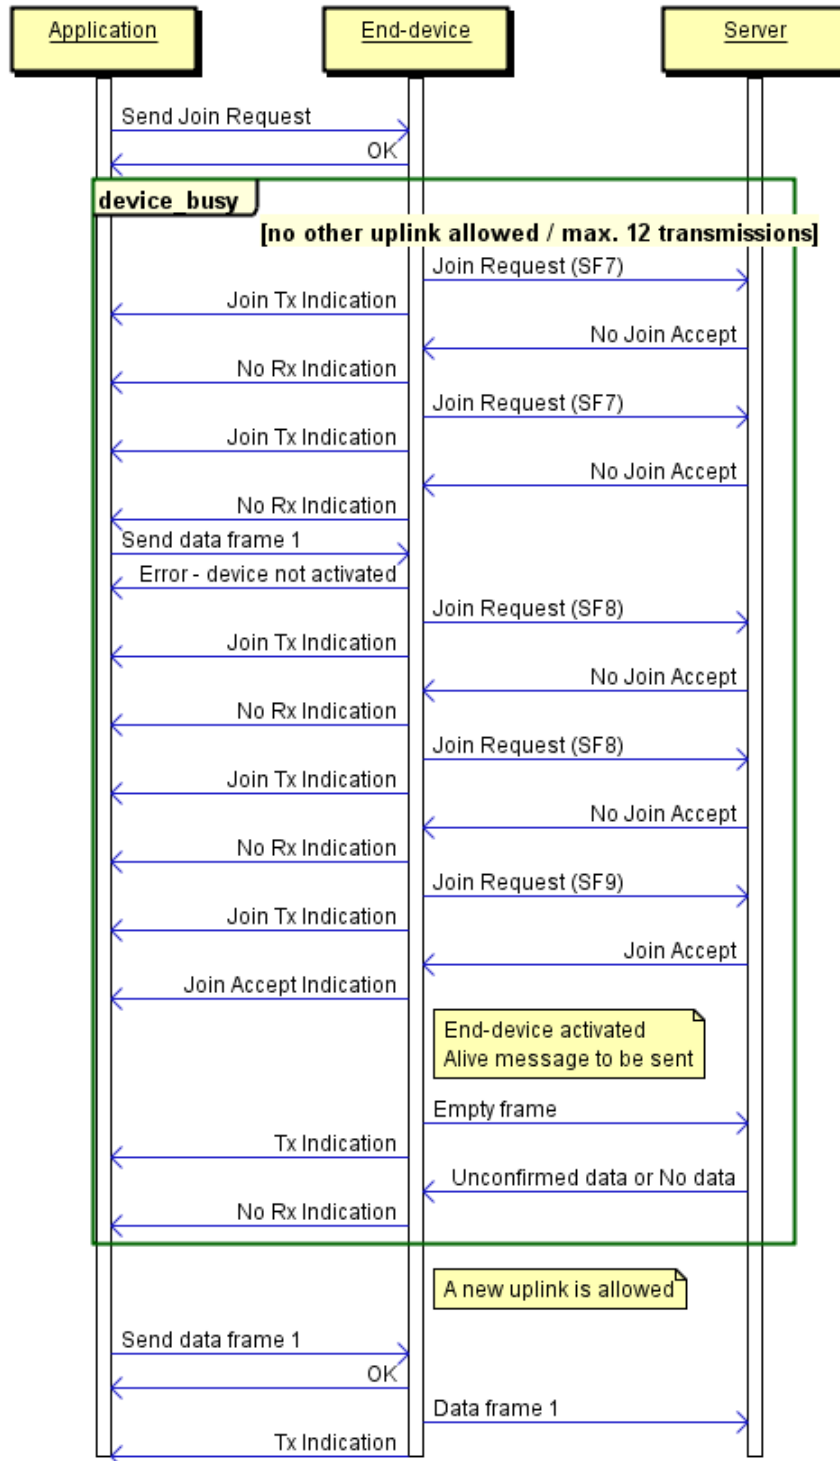


Fig. 3-1: Sequence chart - Join procedure

3.2 Unconfirmed Data Retransmission

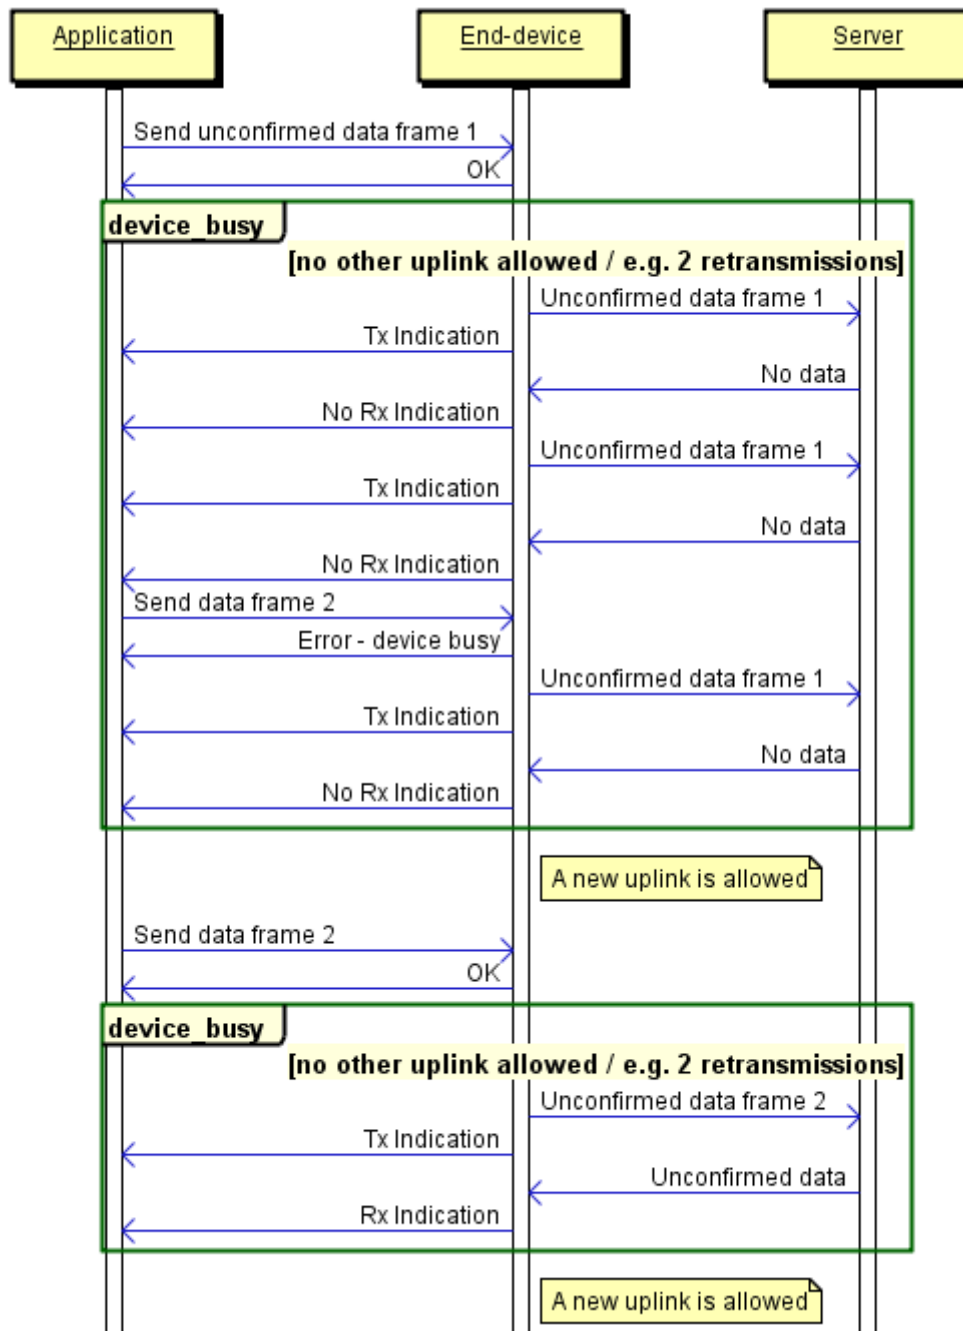


Fig. 3-2: Sequence chart - Unconfirmed data retransmission

3.3 Confirmed Data Retransmission

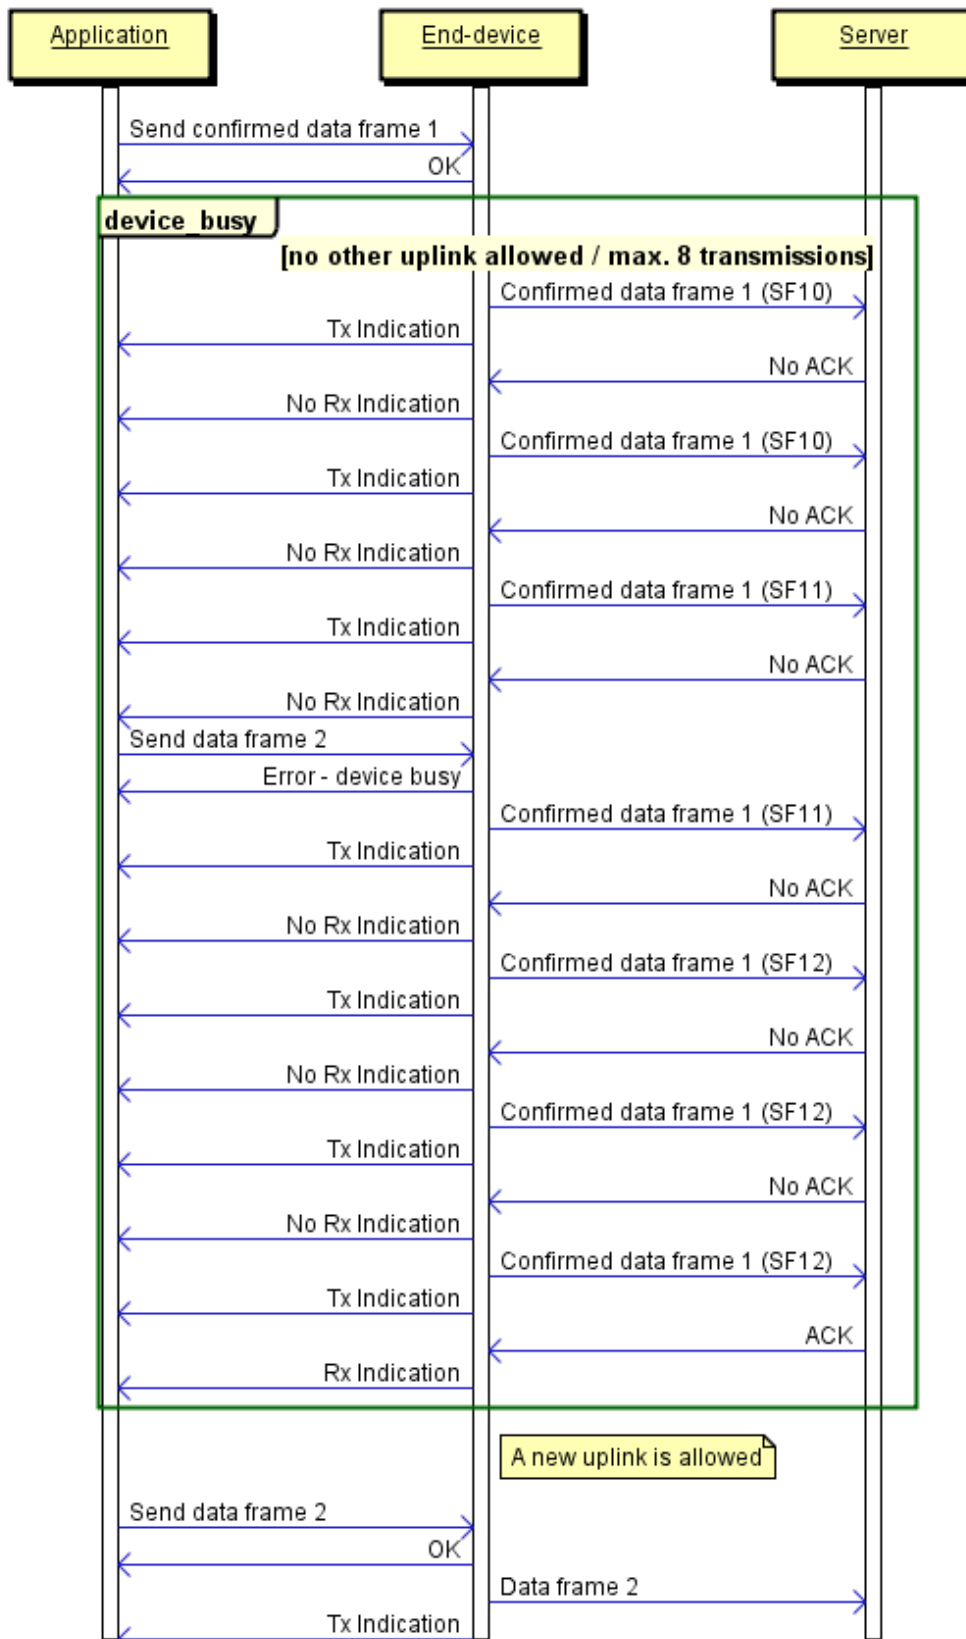


Fig. 3-3: Sequence chart - Retransmission procedure

3.4 Duty Cycle

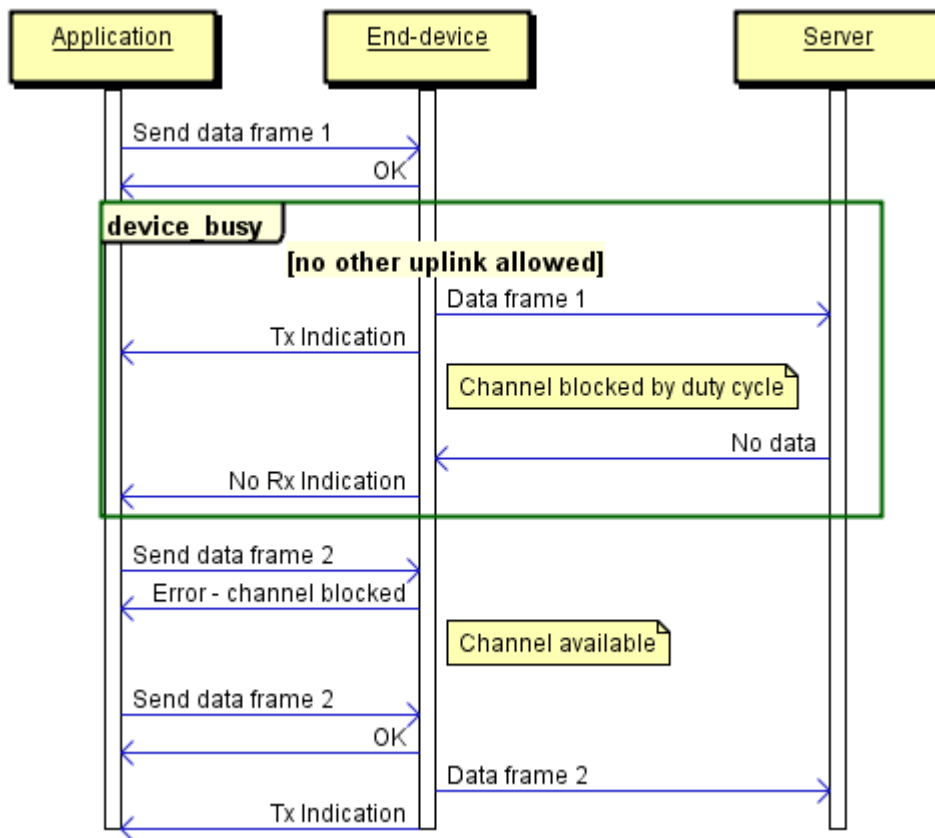


Fig. 3-4: Sequence chart - Duty Cycle

3.5 Message Acknowledge Procedure

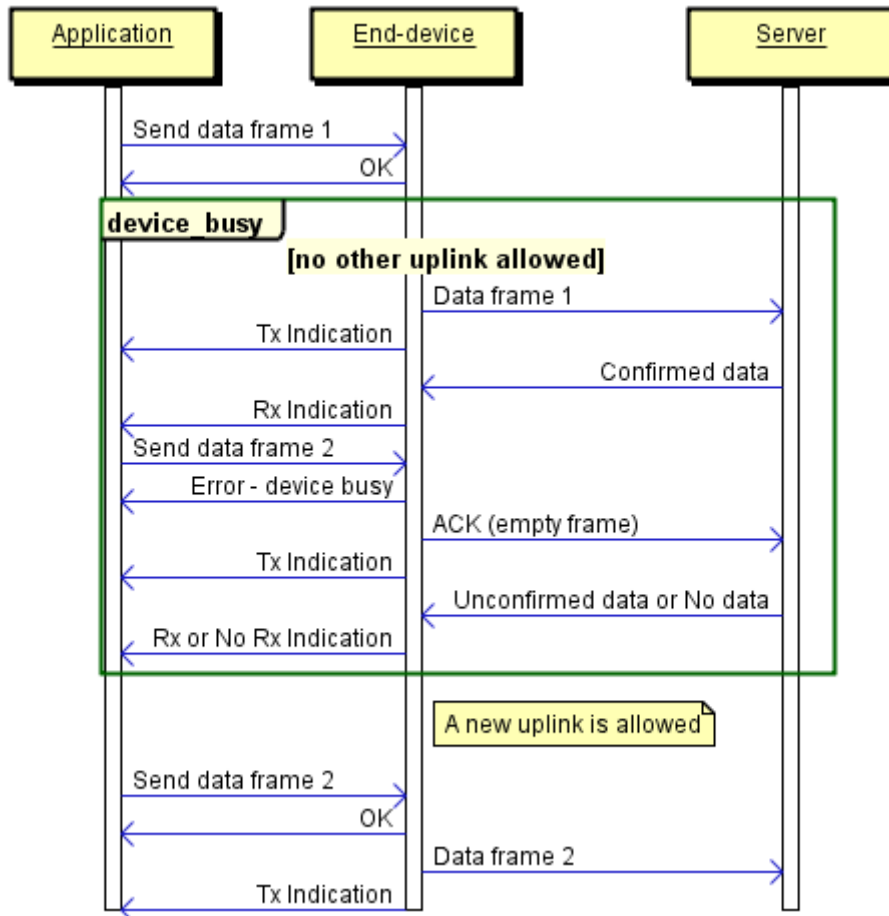


Fig. 3-5: Sequence chart - Acknowledgement procedure

3.6 Frame Pending Bit

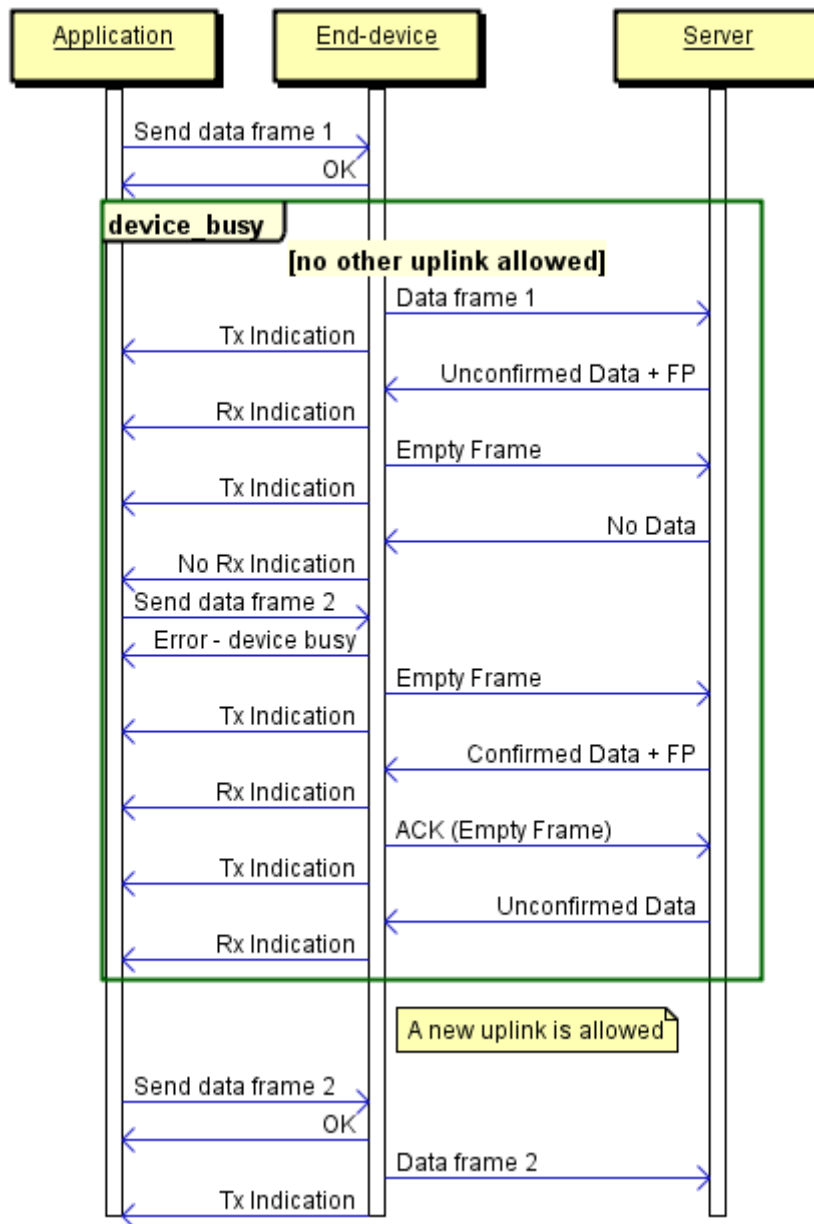


Fig. 3-6: Sequence chart - Frame pending bit

3.7 MAC Commands

3.7.1 MAC Commands – Piggybacked in Header

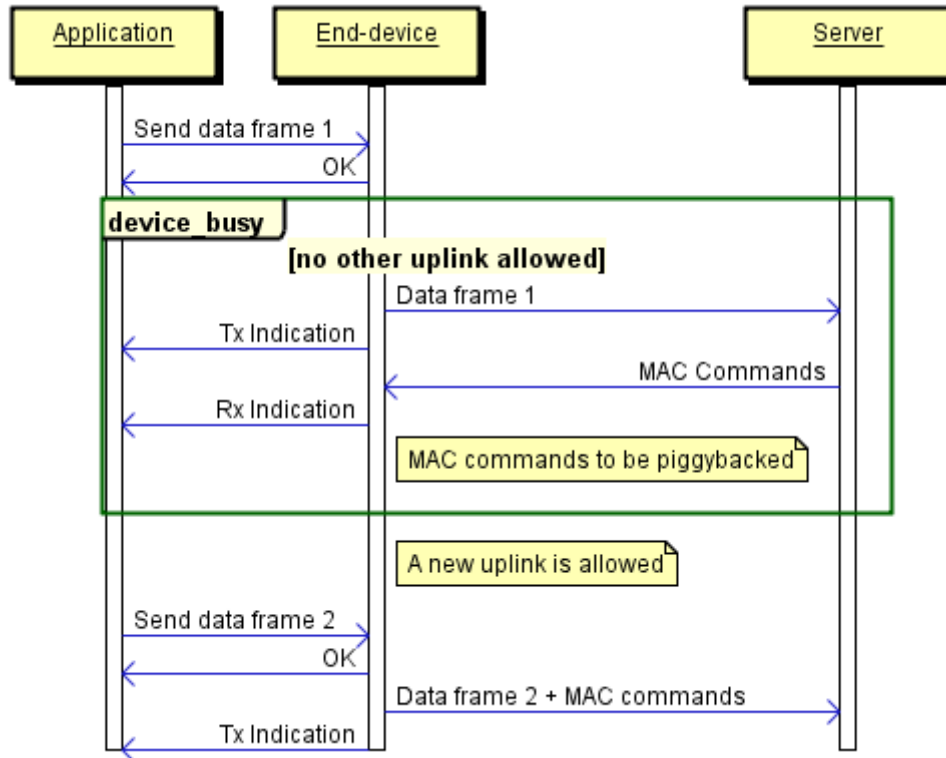


Fig. 3-7: Sequence chart - MAC Commands (piggybacked in header)

3.7.2 MAC Commands – Port 0

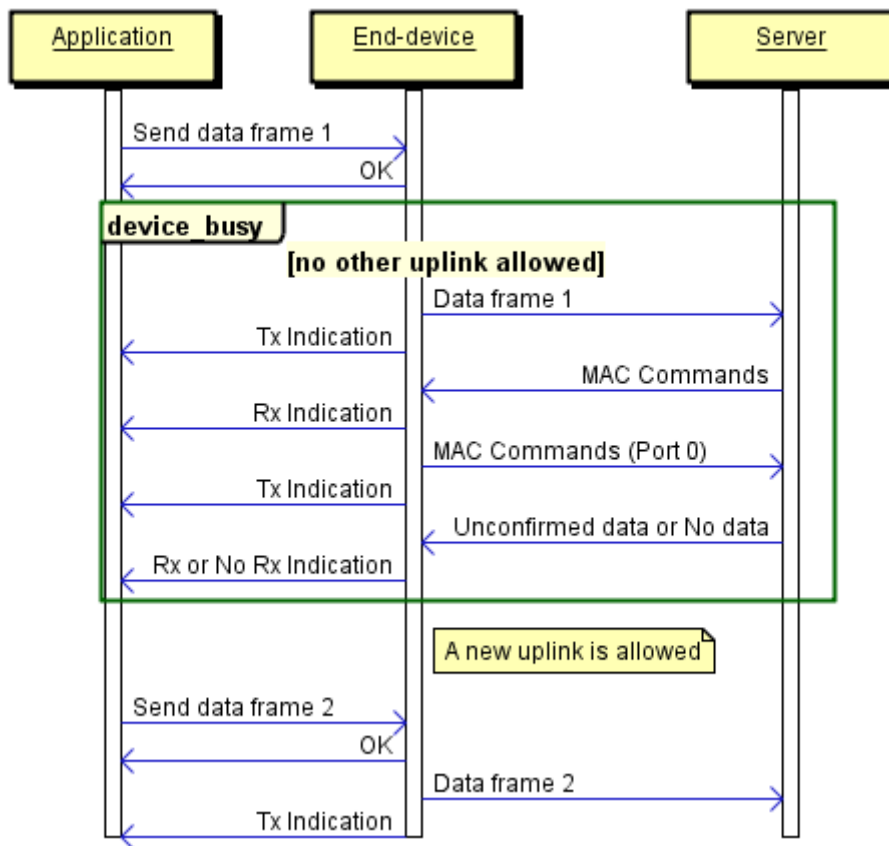


Fig. 3-8: Sequence chart - MAC Commands (using port 0)

4. Known Limitations

This chapter lists the current known limitations related to the WiMOD LoRaWAN EndNode Modem firmware:

- No multicast messages implemented (Class C)
- FSK mode not supported during continuously listening (Class C)

5. Appendix

5.1 RF Gain Examples

5.1.1 iM880B-L Radio Module configured in EU868 band

For this example a maximum RF power (limited by the radio module) of 20dBm and a maximum allowed EIRP of 16dBm have been considered.

Max. RF power	Max. allowed EIRP	RF Gain	Max. EIRP	Configured EIRP	Configured TRX power
20dBm	16dBm	0dBd	16dBm	16dBm	14dBm
20dBm	16dBm	+6dBd	16dBm	16dBm	8dBm
20dBm	16dBm	-6dBd	16dBm	16dBm	20dBm

Table. 5-1: Example for RF Gain settings - iM880B-L & EU868

5.1.2 iM880B-L Radio Module configured in IN865 band

For this example a maximum RF power (limited by the radio module) of 20dBm and a maximum allowed EIRP of 30dBm have been considered.

Max. RF power	Max. allowed EIRP	RF Gain	Max. EIRP	Configured EIRP	Configured TRX power
20dBm	30dBm	0dBd	22dBm	22dBm	20dBm
20dBm	30dBm	+6dBd	28dBm	28dBm	20dBm
20dBm	30dBm	-6dBd	16dBm	16dBm	20dBm

Table. 5-2: Example for RF Gain settings - iM880B-L & IN865

5.1.3 iM881A Radio Module configured in EU868 band

For this example a maximum RF power (limited by the radio module) of 14dBm and a maximum allowed EIRP of 16dBm have been considered.

Max. RF power	Max. allowed EIRP	RF Gain	Max. EIRP	Configured EIRP	Configured TRX power
14dBm	16dBm	0dBd	16dBm	16dBm	14dBm
14dBm	16dBm	+6dBd	16dBm	16dBm	8dBm
14dBm	16dBm	-6dBd	10dBm	10dBm	14dBm

Table. 5-3: Example for RF Gain settings - iM881A & EU868

5.1.4 iM881A Radio Module configured in IN865 band

For this example a maximum RF power (limited by the radio module) of 14dBm and a maximum allowed EIRP of 30dBm have been considered.

Max. RF power	Max. allowed EIRP	RF Gain	Max. EIRP	Configured EIRP	Configured TRX power
14dBm	30dBm	0dBd	16dBm	16dBm	14dBm
14dBm	30dBm	+6dBd	22dBm	22dBm	14dBm
14dBm	30dBm	-6dBd	10dBm	10dBm	14dBm

Table. 5-4: Example for RF Gain settings - iM881A & IN865

5.2 List of Abbreviations

ABP	Activation By Personalization
FW	Firmware
HCI	Host Controller Interface
HW	Hardware
EIRP	Effective Isotropic Radiated Power
ERP	Effective Radiated Power
LR	Long Range
LoRa	Long Range
LPM	Low Power Mode
OTAA	Over The Air Activation
RAM	Random Access Memory
RF	Radio Frequency
RSSI	Received Signal Strength Indicator
RTC	Real Time Clock
SW	Software
TRX	Transceiver
UART	Universal Asynchronous Receiver/Transmitter
WiMOD	Wireless Module by IMST

5.3 List of References

- [1] WiMOD_LoRaWAN_EndNode_Modem_HCI_Spec.pdf
- [2] iM880B_Datasheet.pdf
- [3] LoRaWAN Regional Parameters.doc

5.4 List of Figures

Fig. 1-1: WiMOD LoRaWAN EnNode Modem Firmware Architecture	5
Fig. 2-1: Current Consumption Diagram - iM880B-L	11
Fig. 3-1: Sequence chart - Join procedure	12
Fig. 3-2: Sequence chart - Unconfirmed data retransmission	13
Fig. 3-3: Sequence chart - Retransmission procedure	14
Fig. 3-4: Sequence chart - Duty Cycle	15
Fig. 3-5: Sequence chart - Acknowledgement procedure	16
Fig. 3-6: Sequence chart - Frame pending bit	17
Fig. 3-7: Sequence chart - MAC Commands (piggybacked in header)	18
Fig. 3-8: Sequence chart - MAC Commands (using port 0)	19

6. Regulatory Compliance Information

The use of radio frequencies is limited by national regulations. The radio module has been designed to comply with the European Union's R&TTE (Radio & Telecommunications Terminal Equipment) directive 1999/5/EC and can be used free of charge within the European Union. Nevertheless, restrictions in terms of maximum allowed RF power or duty cycle may apply.

The radio module has been designed to be embedded into other products (referred as "final products"). According to the R&TTE directive, the declaration of compliance with essential requirements of the R&TTE directive is within the responsibility of the manufacturer of the final product. A declaration of conformity for the radio module is available from IMST GmbH on request.

The applicable regulation requirements are subject to change. IMST GmbH does not take any responsibility for the correctness and accuracy of the aforementioned information. National laws and regulations, as well as their interpretation can vary with the country. In case of uncertainty, it is recommended to contact either IMST's accredited Test Center or to consult the local authorities of the relevant countries.

7. Important Notice

7.1 Disclaimer

IMST GmbH points out that all information in this document is given on an “as is” basis. No guarantee, neither explicit nor implicit is given for the correctness at the time of publication. IMST GmbH reserves all rights to make corrections, modifications, enhancements, and other changes to its products and services at any time and to discontinue any product or service without prior notice. It is recommended for customers to refer to the latest relevant information before placing orders and to verify that such information is current and complete. All products are sold and delivered subject to “General Terms and Conditions” of IMST GmbH, supplied at the time of order acknowledgment.

IMST GmbH assumes no liability for the use of its products and does not grant any licenses for its patent rights or for any other of its intellectual property rights or third-party rights. It is the customer’s duty to bear responsibility for compliance of systems or units in which products from IMST GmbH are integrated with applicable legal regulations. Customers should provide adequate design and operating safeguards to minimize the risks associated with customer products and applications. The products are not approved for use in life supporting systems or other systems whose malfunction could result in personal injury to the user. Customers using the products within such applications do so at their own risk.

Any reproduction of information in datasheets of IMST GmbH is permissible only if reproduction is without alteration and is accompanied by all given associated warranties, conditions, limitations, and notices. Any resale of IMST GmbH products or services with statements different from or beyond the parameters stated by IMST GmbH for that product/solution or service is not allowed and voids all express and any implied warranties. The limitations on liability in favor of IMST GmbH shall also affect its employees, executive personnel and bodies in the same way. IMST GmbH is not responsible or liable for any such wrong statements.

Copyright © 2011, IMST GmbH

7.2 Contact Information

IMST GmbH

Carl-Friedrich-Gauss-Str. 2-4
47475 Kamp-Lintfort
Germany

T +49 2842 981 0

F +49 2842 981 299

E wimod@imst.de

I www.wireless-solutions.de